

JS100说明书 双折 折合尺寸：85*85MM，展开尺寸：170*85MM

封面

封底

Direction for use

- Please get the main body fully charged before first use (the blue indicator lamp will be always on after the main body is fully charged), and then clean the main body, cutter bar and transparent cup.

- Install the cutter bar onto the cutter shaft in the transparent cup and put the cleaned food into the transparent cup (upper limit for food).

P7

- Install the main body along the slot of the transparent cup after putting food into the transparent cup. The blue indicator lamp will flash for 2 times after installing of the main body, and then press the jog switch with the hand for processing food. The blade may be clamped after start-up. In the event of excessive food, please take out some of the food appropriately and press the jog switch again for processing.

- The product will stop automatically 30S after start-up; continue to press the jog switch for processing when needing more fine food. After processing, open the main body, pour the food in transparent cup out and rinse it thoroughly with water.

5.Instructions for indicator lamps

State	Indication
Under charging	The blue indicator lamps flash slowly
Fully charged	The blue indicator lamp is always on
Clamped by food	The blue indicator lamps flash quickly
Clamping failure between main body and transparent cup, switch on	The blue indicator lamp flashes
Battery power shortage	The blue indicator lamp flashes then goes out

P8

Brand Introduction

Deerma is an innovative electrical appliance brand that is dedicated to design, production and sales of household appliances. Founded in 2011, through direct industry chain control and precise selection strategy, Deerma can produce well-designed, reliable and cost-effective small home appliances.

Since its establishment in 2011, Deerma has been highly recognized and loved by consumers. Its strong research - production-sales power enables it to win the "F Product Design Award" and "AWE Award", and enter the shortlist of China's "Top 100 Online Brands" and "Popular Online Household Appliances". And has won many special honours, such as "Guangdong Top 500 Enterprises", "Guangdong Manufacturing Top 100 Enterprises", "Guangdong High-tech Products", "Guangdong Outstanding Independent Brands" and "Guangdong Top 100 Circulation Enterprises".

Our featured products, including humidifier and stick vacuum cleaner, have grown to be the benchmark of this industry. Now Deerma has been introduced to nearly 200 platforms, including major Chinese E-commerce platforms, gift-giving platforms, bank malls and points-based malls. As for the global market, our products have been sold to more than 130 countries in Americas, Europe and Southeast Asia, providing global users with more valuable products.

With "good design, high quality and favorable price" in mind, Deerma provides customers with elegant, high-performance and high value-added products that are well designed in terms of the appearance, functions, quality and applications, striving to meet users' demand for better life. Deerma will always provide customers with high-quality household appliances and contribute its share in improving users' lives.

P1

TABLE OF CONTENT

EN	01-08
DE	09-16
RU	17-24
JPN	25-32
ES	33-40
PL	41-48

P2

Circuit Diagram

This diagram is for reference only. No further notice will be issued in case of any change. The product is subject to the real object, and our company reserves all the right for final interpretation.

Precautions

- To avoid harm caused by misuse, before using the product, and use the product strictly in accordance with the purpose stated in the instruction manual.
- It is a portable processor, and please charge it before using it for the first time.
- Please make sure that the blade has been installed in place and can operate normally before putting in food.
- Scraping with sharp objects is forbidden.
- Operation of the process overload is prohibited.
- Please avoid microwaving or freezing the processor in refrigerator for fear of fracture. The transparent cup is high-temperature resistant at 100°C, and thus can be sterilized and washed in boiling water.
- The product cannot be used for processing superhard food, such as coffee bean, soybean, cola corni ash, rice, ice cube, raw carrot in cubes or frozen food, etc.
- It is prohibited to touch the blade, motor and other detachable parts during operation of the product for fear of injury or damages to the product.

P3

- The product cannot operate continuously for more than 30 seconds. Upon 30 seconds of continuous operation, it needs to rest for 2 minutes before operation again. Taking resting for 2 minutes after 30 seconds as a working cycle, the product must be cooled for 30 minutes after 3 consecutive working cycles to ensure the service life of the product.
- The blade is very sharp. Please do not touch the blade directly with hands. Clamp the cutter bar on the blade when taking the blade out or installing it.
- Do not clean the product with steel wool, abrasive cleaner or corrosive liquid (such as gasoline or acetone). The product can be washed directly with clean water.
- Do not put any part of the product into a dishwasher for cleaning.
- The product must be stored out of reach of children. Those (including children) who are physically disabled, sensuously or mentally handicapped or lack relevant experience and knowledge are not allowed to use or play with the product.
- The product is intended for individuals or families, not for commercial purpose.
- Caution: Be careful to prevent your hands from being out by blade when taking out the blade, emptying the transparent cup and washing the product.
- Before discarding the appliance, the battery must be taken out of the appliance.
- When removing the battery, the appliance must be powered off.
- The battery should be disposed of safely. The steps to remove the battery:
 - Push the decorative ring and remove the button silica gel, then unscrew the screw and remove the plastic cover.
 - Out off the power cords of the positive and negative colors of the battery respectively, and wrap the power cords of the positive and negative poles of the battery with electrical tape.
 - The battery should be disposed of safely. The battery should be put into the designated recycling location or handed over to the environmental protection recycling department for disposal.

**HOUSEHOLD USE ONLY
CAUTION: RISK OF ELECTRIC SHOCK-DRY
LOCATION USE ONLY**

P4

Product features

- Unique appearance, full-body watertightness and wireless portable design.
- Electronic and inductive double safety switch design, enabling to control the fineness degree of food freely by jogging the key switch.
- Food-grade AS transparent cup and food-grade SUS304 stainless steel blade, supporting easy cleaning and high temperature sterilization and being more healthy and hygienic.
- Detachable parts, supporting direct flushing.

Product structure

- Jog switch
- Cutter bar
- USB charging port
- Transparent cup
- Main body
- Scraper

P5

Packing list

Parts name	Quantity
Main body	1
Cutter bar	1
Transparent cup	1
USB charge wire	1
Instructions for use	1
Scraper	1

Product parameters

Product name: Mini Garlic Stirrer	Rotor power: 40W
Model: DEM-JS100	Service time: <30s
Rated capacity: 150mL	Rated input voltage: 5V
Battery voltage: 3.7V	Rated input current: 2A

P6

Fault analysis

Faults	Indicator lamp	Causes	Troubleshooting
After installation of the main body, the product cannot be started by pressing the switch	The blue indicator lamp flashes for 10s and then goes out	Main body and transparent cup are installed improperly Battery is in power shortage	Install the main body and transparent cup properly Charge the main body
Main body is changing	The indicator lamp does not flash	Motor is damaged	Twist the motor shaft. If the main body still doesn't start, please take the product to the nearest maintenance point for testing
The motor gives off an unpleasant smell during first few times of application of the product		The indicator lamp causes	Replace the charge wire with a new one Troubleshooting
			If there is still such smell after several times of application, please take the motor to the nearest maintenance point for testing

P9

Faults	Causes	Troubleshooting
Blade is stuck	The blade is entangled or stuck by foods	Take out the main body, take out foods and cut them into small pieces or put in less foods

Attention
The above are common fault analysis and treatment methods. For other faults, please contact the distributor or directly go to the maintenance point designated by the Company for testing and repair. Do not disassemble and repair the product by yourself.

Cleaning and maintenance

- Please clean the main body, blade and transparent cup immediately after using the product.
- The product can be washed directly with water or wiped up with a soft damp cloth.
- Clean the product with a cleaning pad and clear water contained with a proper amount of detergent. The effect is better by using warm water.
- The blade is very sharp, and don't touch it by hands. To avoid injury, the water should be clear enough to enable the blade visible during cleaning.
- Do not use abrasive or corrosive cleaning agents for cleaning.
- It is strictly forbidden to disinfect parts of the product at high temperature.
- After cleaning, wipe all parts of the product dry or blow dry, reassemble them and store them. To store the product for a long time, please charge the product within three months.

P10