

**Two-Slice Toaster
MOD. R-207**

Operating Instructions



- FOR HOUSEHOLD USE ONLY -

IMPORTANT SAFEGUARDS

Signal Word Definitions

DANGER – Indicates an imminently hazardous situation, which, if not avoided, will result in serious injury or death. Usage of this signal word is limited to the most extreme situations.

WARNING – Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION – Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

Always follow basic safety precautions when using electrical products, especially when children are present.

READ ALL INSTRUCTIONS BEFORE USE.



WARNING-- To reduce the risk of fire, electric shock, or serious personal injury:

- Always make sure the product is unplugged from the electrical outlet before relocating, servicing, or cleaning it.
- This product is intended for indoor, non-commercial, household use in toasting foods for human consumption. Do not use the product for any other purpose.
- Do not leave the toaster unattended while it is in use. Always unplug the product from the electric outlet when it is not in use.
- Keep the product out of the reach of children and pets. Extra caution is necessary when using this product near children.
- Place the product on a flat, stable, heat-resistant surface, in an open area with at least four to six inches of air space on all sides of the product for air circulation.
- Do not place the product on or near gas or electric burners, inside or on top of a heated conventional oven, microwave oven, or other heat source.
- Do not allow this product to touch flammable materials (e.g., curtains, wall coverings, clothing, dishtowels) during its use.
- Attachments, when furnished, may become hot during use. Allow the attachments to cool before handling them. Do not use attachments not recommended or sold by the product manufacturer.
- Do not use the toaster near water or other liquids. Never operate the product while you are standing/sitting in a damp or wet area.
- Do not place or drop the product into water or other liquids. If the product falls into water, ***do not touch or reach into the water.*** Immediately unplug it from the electrical outlet.
- Never drop or insert metal objects, including metal utensils or foil packages, into any opening of the product. Remove all protective food wrappings before inserting them into this product.
- Do not heat pastries with drippy frostings or open fillings in the product.
- Clean the Crumb Tray after each use.
- To disconnect the product from an electric outlet, pull directly on the plug; do not pull on the power cord.

- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- Keep the power cord and product away from heated surfaces.
- Never operate this product if it has a damaged power cord or plug, is not working properly, leaks, or has been dropped or damaged. This product has no user-serviceable parts. Do not attempt to inspect or repair this product yourself. Only qualified service personnel should perform any servicing. Take the product to the appliance repair shop of your choice for inspection and repair.



CAUTION-- To reduce the risk of personal injury or product/property damage:

- Do not move the product when it is heated. Allow the product to thoroughly cool before handling it.
- Do not insert breads that do not fit into the Bread Slot easily
- Never insert into the Bread Slot any metal foil packages or utensils.
- Do not touch hot surfaces. Always use the handle and knobs of the product. Use protective oven mitts or gloves to avoid burns.
- Do not allow the power cord to hang (e.g., over the edge of a table or counter) where it may be tripped over or pulled.
- Unplug the product from an electric outlet when not in use or when the product will be left unattended.
- This product is intended for indoor, non-commercial, non-industrial, household use only. Do not use outdoors.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

PARTS



1. Bread Slots
2. Bread Carriage Lever
3. Reheat Button
4. Cancel Button
5. Defrost Button
6. Light/Dark Selector (1-8)
7. Crumb Tray

To Use

WARNING: To reduce the risk of fire, electric shock, or serious personal injury, before first use, make certain that all packaging materials have been removed from the toaster. Check both toaster slots for packing materials.

NOTE: *Heat up the toaster the first time with nothing in the Bread Slots (1) to allow the heating elements to burn off any dust which may have accumulated during factory assembly and shipping.*

1. Ensure the Crumb Tray (2) is in place and that the Bread Carriage (3) is in the "bread up" position.
2. Set the Toaster on a flat, heat-resistant surface away from the edge of the counter and at least four to six inches away from the wall or rear of the counter.
3. Plug the Power Cord (8) into a 230 Volt electric outlet.
4. Insert one or two slices of bread into the Bread Slots (1).
5. Turn the Light/Dark Selector (7) to the desired position.
NOTE: *The higher the number the darker the toast will be. Until familiar with the settings, start with a lower number.*
6. Press the Bread Carriage Lever (3) down until it locks into position.
7. When the toasting cycle is completed, the toast will pop up. To interrupt the toasting cycle, press the Cancel Button (6).
8. When finished using the Toaster, unplug it from the electric outlet.

Toasting Notes:

Toasting is a combination of cooking and drying the bread. Moisture levels differ from one bread to another, resulting in varying toasting times.

- For slightly dry bread, set the Light/Dark Selector (7) to a low number.
- For fresh bread or whole wheat bread, set the Light/Dark Selector (7) to a high number.
- Breads with uneven surfaces (e.g., English muffins) require a higher setting.
- Thickly cut pieces of bread (e.g., Bagels) will require longer toasting times, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting occurs.
- Very thick pieces may require two toasting cycles.
- When toasting raisin or other fruit breads, remove any loose raisins or fruit pieces from the surface of the bread before placing it into the toaster. This will help prevent pieces from falling into the toaster or sticking to the guard wire in the slot.
- To toast a single slice of bread, set the Light/Dark Selector (7) to a low number.

Reheat Button:

1. Insert one or two slices of bread.
2. Press the Bread Carriage Lever (3) down until it locks into position.
3. Press the Reheat Button (4). The red LED will illuminate next to the Reheat Button (4).
4. When the cycle is complete, the Bread Carriage Lever (3) will raise the toasted item.
5. To stop the toasting cycle before it is finished, press the Cancel Button (6).

Care and Maintenance

WARNING: Always unplug the Power Cord from the electrical outlet and allow the product to completely cool before cleaning it.

- **WARNING:** To avoid a fire hazard, clean the Crumb Tray (2) after each use.
 1. Slide out the Crumb Tray from the bottom of the product and remove any crumbs.
 2. Replace the Crumb Tray into the product after cleaning it.
- Wipe the exterior surface of the product with a clean, damp cloth.
- Do not use abrasive cleaners or pads to clean the product.
- To remove jammed bread:

WARNING: The bread will be hot, remove carefully to avoid a possible burn hazard.

CAUTION: Do not insert metallic objects inside of the product, as an electrical shock hazard may result.

 1. Unplug the Power Cord from the electric outlet.
 2. Lower the Bread Carriage Lever (3) and keep it in a lowered position.
 3. Remove the jammed bread slice from the toaster taking care not to damage the heating elements.
 4. Raise the Bread Carriage Lever (3) before using the Toaster.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.