

Rohnson

SmartChef

Wi-Fi Air Fryer

Instruction Manual

Model: R-2838



Please read this manual carefully before using the device.

Connect your device to the Rohkson app

1. Install the Rohkson app on your smartphone via Android or IOS.
2. Create an account. For more information, see the "Login Details" section.
3. Pair the Air Fryer with the Rohkson app on your smartphone. Long press the "On/Off" icon for 5 seconds, then the WIFI icon will appear on the screen, slowly lighting up. Press and hold the WiFi icon. Now the WIFI icon will start flashing rapidly.
4. Then, in the Rohkson app, press "Add device" and an update window will appear on your mobile phone screen to install your device.

General description

1. Basket
2. Frying rack
3. Basket handle
4. Touch screen panel
5. Timer (Dried fruits 0-24H, non-dried fruits 1-60mins)/Power-on knob
6. Temperature control knob (Dried fruits 30-80°C, non-dried fruits 80-200°C)
7. Cooking manual key (10 programs)
8. Power-on / power-off key
9. Air inlet
10. Air outlet openings
11. Mains cord

Danger

- Do not immerse the housing in water or rinse under the tap due to the electronic and heating components.
- Avoid any liquid entered the appliance to prevent from electric shock or short-circuit.
- Keep all ingredients in the basket to prevent any contact from heating elements.
- Do not cover the air inlet and the air outlet when the appliance is working.
- Fill the pan with oil may cause a fire hazard.
- Do not touch the inside of the appliance while it is operating.

Warning

- Check if the voltage indicated on the appliance fits the local mains voltage.
- Do not use the appliance if there is any damage to plug, main cord or other parts.
- Do not go to any unauthorized person to replace or fix damaged main cord.
- Keep the appliance and its mains cord out of reach of children.
- Keep the mains cord away from hot surfaces.
- Do not plug in the appliance to an earth wall socket. Always make sure that the plug is inserted into the wall socket properly.
- Do not connect appliance to an external timer switch.

- Do not place the appliance on or near combustible materials such as a tablecloth or curtain.
- Do not place the appliance against a wall or against other appliance. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any other purpose than described in this manual.
- Do not let the appliance operate unattended.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful with hot steam and air when you remove the pan from the appliance.
- Any accessible surfaces may become hot during use.
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.

Caution

- Ensure the appliance is placed on a horizontal, even and stable surface.
- This appliance is designed for household use only. It may not be suitable to be safely used in environments such as staff kitchens, farms, motels, and other non-residential environments.
- The guarantee is invalid if the appliance is used for professional or semi-professional purposes or it is not used according to instructions.
- Always unplug the appliance while not using.
- The appliance needs approximately 30 minutes to cool down for handle or cleaning safely.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Household use only.
- Please strictly follow the instructions in this user manual when using the Air Fryer. Users are responsible for any loss or damage that may arise from improper use of the Air Fryer.

Automatic switch-off

The appliance has a built-in timer, it will automatically shut down the appliance when the count down to zero. You can manually switch off the appliance by pressing the off button; it will automatically shut down the appliance in 20 seconds.

Before first use

1. Remove all packaging materials and stickers or labels.
2. Clean the basket and pan with hot water, with some washing liquid and a non-abrasive sponge. These parts are safe to be cleaned in a dishwasher.
3. Wipe inside and outside of the appliance with a cloth. And there is no need to fill the pan with oil and frying fat as the appliance works on hot air.

Using the appliance


1. Connect the main plug into an earthed wall socket.
2. Carefully pull the basket out of the air fryer.
3. Put the frying rack into the basket.
4. Place the ingredients in the basket.
5. Slide the basket back into the AIR FRYER.

Note: Do not exceed the MAX indication (see section 'settings' in this chapter), as it may affect the quality of the cooked food.







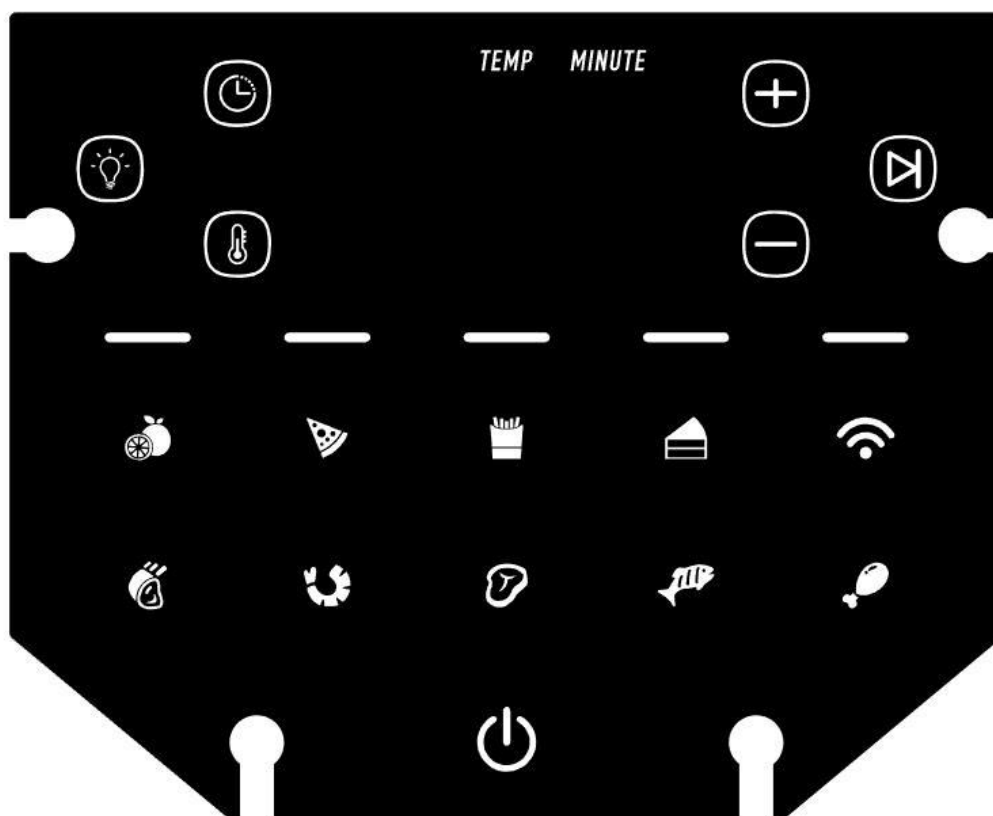



Caution: Do not touch the basket while the unit is operating and right after the cooking process as it gets very hot. Only hold the basket by the handle.

6. Do not fill the basket with oil or any other liquid.
7. Finger touched Power on/off knob.
8. Finger touched Menu to choose function.

Control panel presentation



Notes: 10 functions are provided: Dried fruit, Pizza, Chips, Cake, Wi-Fi, Pork chop, Shrimp, Steak, Fish, Chicken Leg. Repeat Finger touched "Menu" to change and choose the cooking function. More flexible timed setting and temperature were needed; adjustment can be made directly by pressing corresponding knobs. There is the Power knob which can adjust time setting - Increase/Decrease 1 minute per a spin and adjust temperature setting - Increase/Decrease 5 degrees per a spin.

Temperature range °C		Time range MIN		Manual (°C -Min)										
				Preset	Dried fruit	Pizza	Chips	Cake	Wifi	Pork chop	Shrimp	Steak	Fish	Chicken Leg
Dried fruit	Non-dried fruit	Dried fruit	Non-dried fruit	Preset										
30-80	80-200	0-24H	1-60	180-15	30-4H	175-25	200-30	160-20	/	185-20	160-25	180-20	160-25	200-25

Notes: Preset function, press the Menu to select a preset function. If ingredients not included in other 10 functions, select proper function and temperature for the ingredients. See section 'settings' in this chapter to determine the right temperature.

9. After choosing the function, please press Power to start cooking.

Caution: During the hot air frying process, the LED lamp will be running. Press Power button, the LED lamp will be shown OFF.

Clock: Clock can set time for cooking, finger to touch Power knob, then setting temperature and time or choose one program, press Power knob again to set cooking start time.

10. Some ingredients require shaking halfway during the preparation time (see section 'settings' in this chapter). To do this, pull the basket out of the appliance by the handle and shake it. Then slide the basket back into the air fryer.

11. Machine will chime when cooking cycle is complete. When you hear the bell for 5 times, this means the cooking cycle is finished. Pull the basket out of the appliance and place it on the heat-resistant holder.

Note: After the set time ends, the heat/ cooking function stops working, but the fan will continue to run for about 20 seconds to blow away the hot air for safety. Finally, the timer bell will ring 5 times to indicate the completion of the cooking process.

12. Check if the ingredients are ready.

Note: If the ingredients are not ready yet, simply slide the basket back into the appliance. Press the temperature control knob to adjust Temperature setting and press the Timer control knob to adjust time setting. And then press the Start knob to run the appliance.

13. To remove ingredients, (e.g., oily meat such as beef, fish or chicken) please use tongs to pick ingredients one by one.

14. To remove the excess oil from the ingredients like chips, fries or vegetables, please use tongs to get the food.

Settings

This table below will help you to select the basic settings for the ingredients.

Note: Keep in mind that these settings are estimated settings only. As ingredients differ in origin, size, shape and brand, we cannot guarantee the best setting for your ingredients. Because the Rapid Air technology heats the air inside the appliance instantly, pulling the basket briefly out of the appliance during hot air frying barely interrupts the process.

Tips

- Smaller ingredients usually require a slightly shorter preparation time than larger Ingredients.
- A larger amount of ingredients only requires a slightly longer preparation time, a smaller amount of ingredients only requires a slightly shorter preparation time.
- Shaking smaller ingredients halfway during the preparation time optimizes the result and can help prevent uneven fried ingredients.
- Add some oil to fresh potatoes and fry your ingredients for another few minutes for a crispy result.
- Do not prepare extremely greasy ingredients such as sausages in the air fryer.

- Snacks that can be prepared in an oven can also be prepared in the air fryer.
- The optimal amount for cooking crispy fries is 500 grams.
- Use pre-made dough to cook snacks quickly and easily. Pre-made dough also requires a shorter preparation time than home-made dough.
- Please use a baking tin or oven dish in the fryer basket if you want to bake a cake or quiche or if you want to fry fragile ingredients or filled ingredients.
- You can also use the air fryer to reheat ingredients. To reheat ingredients, set the temperature to 150°C for up to 10 minutes.

	Min-Max (g)	Time (Min)	Temp °C	Shake	Remark
French fries					
Thin frozen fries	300-700	9-16	200	Y	
Thick frozen fries	300-700	11-20	200	Y	
Home-made fries (8X8mm)	300-800	10-16	200	Y	Add 1/2 tbsp of oil
Homemade potato wedges	300-800	18-22	180	Y	Add 1/2 tbsp of oil
Home-made potato cubes	300-750	12-18	180	Y	Add 1/2 tbsp of oil
	250	15-18	180	Y	
Potato gratin	500	15-18	200	Y	
Steak	100-500	8-12	180	Y	
Meat chops	100-500	10-14	180	Y	
Hamburger	100-500	7-14	180	Y	
Sausage roll	100-500	13-15	200	Y	
Drumsticks	100-500	18-22	180	Y	
Chicken breast	100-500	10-15	180	Y	
Snacks					
Spring rolls	100-400	8-10	200	Y	
Frozen chicken nuggets	100-500	6-10	200	Y	
Frozen fish fingers	100-400	6-10	200	Y	
Frozen bread crumbed	100-400	8-10	180	Y	
Stuffed vegetables	100-400	1-10	160	Y	
Cake	300	20-25	160		
Quiche	400	20-22	180		
Muffins	300	15-18	200		
Sweet snacks	400	1-20	160		

Making home-made fries

To make home-made fries, follow the steps below:

1. Peel and slice the potatoes.
2. Wash the potato sticks thoroughly and dry them with kitchen paper.
3. Pour 1/2 tablespoon of olive oil in a bowl, put the sticks on top and mix until the sticks are coated with oil.

4. Remove the sticks from the bowl with your fingers or a kitchen utensil so that excess oil stays behind in the bowl. Put the sticks in the basket.
5. Fry the potato sticks according to the instructions in this chapter.

Important note

Digital book of different and varied fast food recipes is included in Rohson app.

Cleaning

Clean the appliance after every use.

Do not clean the frying rack, basket and the inside of the appliance by metal kitchen utensils or abrasive cleaning materials, as this may damage the non-stick coating of them.

1. Unplug the plug from the wall socket to let the unit cool down.

Note: Remove the basket to let the fryer cool down more quickly.

2. Wipe the outside of the appliance with a moist cloth.
3. Clean the frying rack and basket with hot water, use some liquid soap and a non-abrasive sponge.

You can remove any remaining dirt by using a liquid soap that removes grease.

Note: The frying rack and basket are dishwasher-proof.

Tip: If dirt is stuck to the basket or the bottom of the basket, fill the basket with hot water put some dishwashing liquid soap. Put the frying rack in the basket and let them soak for about 10 minutes.

4. Clean the inside of the appliance with hot water and non-abrasive sponge.
5. Clean the heating components with a cleaning brush to remove any food residues.

Storage

1. Unplug the appliance and let it cool down thoroughly.
2. Make sure all parts are clean and dry.

Login Details

The device is only compatible with software systems: IOS and Android. The software versions that are accepted are IOS 11.0 and above and Android 5 and above.

Disclaimer: Due to the special cases during the use of the application, we expressly state the following:

1. **Not all Android and IOS systems are compatible with the app. We bear no responsibility for any matter as a result of incompatibility.**
2. WPA-PSK / WPA2-PSK encryption is recommended.
3. Mobile camera must be 5 mega pixels or higher to ensure proper reading of QR code.
4. Due to different network conditions, sometimes one request may time out, therefore it is necessary to do the network configuration again.
5. Due to different network conditions, sometimes the app checking and installation

process may time out. In this case, don't worry, follow the installation instructions and try again.

Caution: It is necessary to block any other wireless network and make sure that the mobile phone or tablet device is connected to the network you want to set up. Additionally, make sure that your device's Wi-Fi connection is working properly and that it can reconnect to your network automatically.

IMPORTANT NOTE

During the first installation of the device with the local wireless Wi-Fi network of the area, it is recommended that both the Air Fryer device and the mobile phone or tablet you will use are at a distance of less than one (1) meter from the modem-router. After installation you can place the Air Fryer at a distance of up to 50 meters from the modem-router. This distance can be affected by different conditions in the location of the device and also by the range of the wireless network used.

NOTE

The Vasiliadis SA company bears no responsibility for problems caused by the Internet connection, the Wi-Fi router or other smart devices. Please contact your provider for further assistance.

Using the Rohson app

The air fryer can be operated manually with its built-in controls, or you can use a Smartphone to control it. Before you start, make sure the Rohson Wi-Fi app is downloaded.


Download and Install the App

As users of Android and IOS devices, search for the app on Google Play or APP Store, respectively, by typing **Rohson** in the search field. You can also download and install the application by scanning the corresponding QR code below depending on the operating system of the mobile phone or tablet you have. The QR code can be scanned using a QR code reader application, where you can search for it and install it on your mobile phone or tablet through the Google Play or APP Store applications respectively.

Note: The language of the application (Greek or English) is adjusted according to the language of the phone or tablet device installed on your device.

Android

IOS

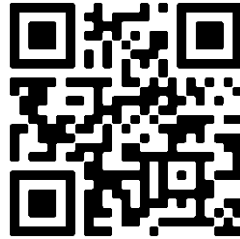

Caution: Please make sure your device is connected to a Wi-Fi router. Also, that the Wi-Fi router is already connected to the Internet before proceeding with user registration.

Note: Vasiliias S.A. respects the user's personal data and expressly declares that it will not use the user's personal data for any advertising reason or for any other reason, without the user's prior written consent.

User Registration



Image 1

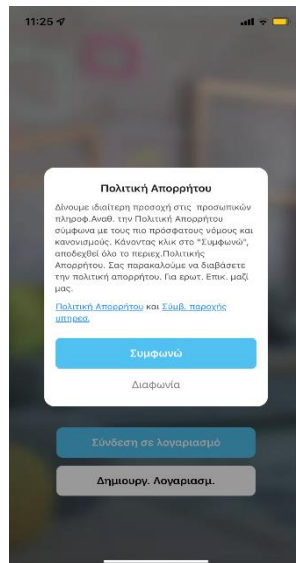


Image 2

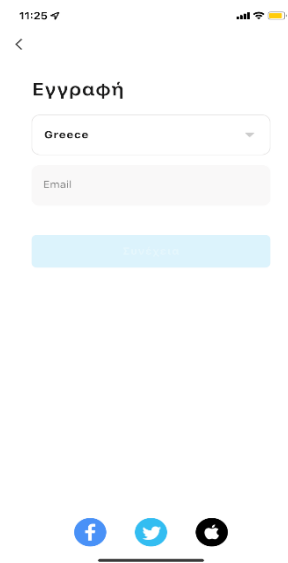


Image 3

Completing the installation process for the Rohnson app and choosing to launch it should go through the process of creating an initial user account. (Image 1)

During the **Registration** process, the user must accept the **Privacy Policy** and then fill in the field with a valid mobile phone number or a valid E-mail address (Image 2 and 3). The application automatically recognizes the country you are in. Otherwise, you can choose the country you want.

- If you choose to top up your mobile phone or an e-mail account, a new message will be sent to your phone or account with a unique code. This code should be filled in the Verification Code field and then enter the code of your choice in the Set Password field (Image 4).
- Select **Done** and the process is completed.

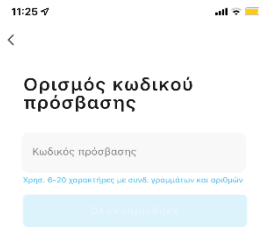


Image 4

NOTE

The user is not charged for receiving the messages and neither should he answer for any reason to the number receiving the messages. Vasilius S.A. is responsible for answering any question that may arise during the operation of the air fryer.

NOTE

The password should contain 6 to 20 letters and numbers.

Login with SMS

You can log in using SMS. Select **Connect with SMS**. The application automatically recognizes the country you are in. Otherwise, you can choose it according to your choice.

Choose to top up your mobile phone or online account, then select **Continue**, a new message will be sent to your phone or online account with a unique code. This code should be filled in the **Verification Code** field.

You forgot the Password

If you have lost your password, please follow the procedure below:

1. Select the **Forgot password** option.
2. The application automatically recognizes the country you are in. Otherwise you can choose it according to your choice.
3. Choose to fill in your mobile phone or the e-mail address (E-mail) that you stated during your initial registration and then choose **Continue**.
4. A new message will be sent to your phone or email with a unique code.

This code should be filled in the **Verification Code** field. Then set your New password in the **Enter password field** and select **Confirm**.

Add device and network connection process

After completing the initial user registration in the application, we continue with the process of adding the air fryer device to the application and connecting it to the local Wi-Fi network.

On the home screen we select either the **Add device** option or the **+** symbol at the top right of our screen (Image 5).

Check **AGAIN** that the network indicator is flashing too fast (twice per second) and select **Indicator is flashing too fast**. Also, through the app you can find instructions on how to set the network indicator to flash very fast (twice a second) by selecting on our screen **Instructions** for the indicator or top right **Features**.

Caution: Please make sure your device is connected to your local Wi-Fi router. Also, that the Wi-Fi router is already connected to the Internet before proceeding to add the device.

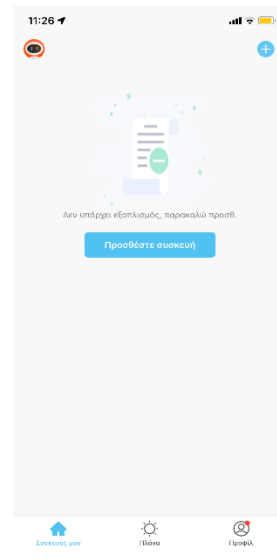


Image 5

Then, we enter the Wi-Fi code of the local network in the corresponding field and select **Confirm** (Image 6). In addition, on this screen we are given the possibility, if this has not been done at first, to choose the correct local Wi-Fi network that we want to connect to by selecting **Change network**.

IMPORTANT NOTE: During the first installation of the air fryer with the local wireless Wi-Fi network of the area, it is recommended that both the air fryer device and the mobile phone or tablet you will use be less than one meter away from the modem-router. After installation you can place the air fryer device at a distance of up to 50 meters from the modem-router. This distance can be affected by different conditions in the location of the device and also by the range of the wireless network used.

The connection process starts and takes some time until it is 100% complete (Image 7). The successful addition of the device will be confirmed shortly. On this screen we can either choose to rename the device with the name of our liking or share with the rest of our family the possibility of using the air fryer.

Note 1: The multi-member license process is described in a separate section below.

Note 2: In the same application, we can add as many devices as we wish to manage, always following the procedure described above.

Then we select **Completed** to proceed with the start-up of the device.

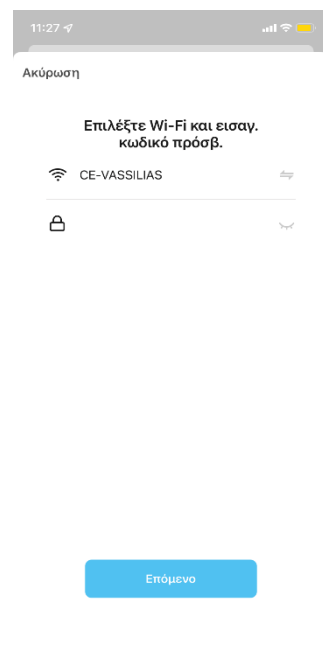


Image 6

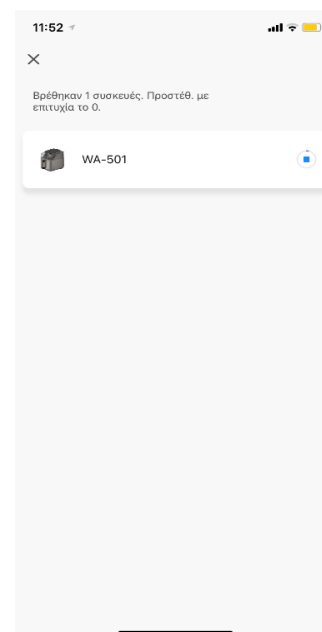


Image 7

If the device addition process is not completed successfully, the following screen will appear (Image 8). Please check the following:

- Functionality of local Wi-Fi wireless network.
- Correct selection of the local wireless Wi-Fi network that we want to install.
- Distance of the air fryer device from the router-modem (less than one (1) meter during the first installation).
- Distance of the mobile phone or tablet device from the router-modem and the air fryer device (less than one (1) meter during the first installation).
- Check that the network indicator on the air fryer device flashes very quickly (twice per second).

After completing the above checks, try again by selecting **Try Again** until the process completes successfully.

Note: In any case, call Vasilius S.A. to help you if you need any advice during installation.

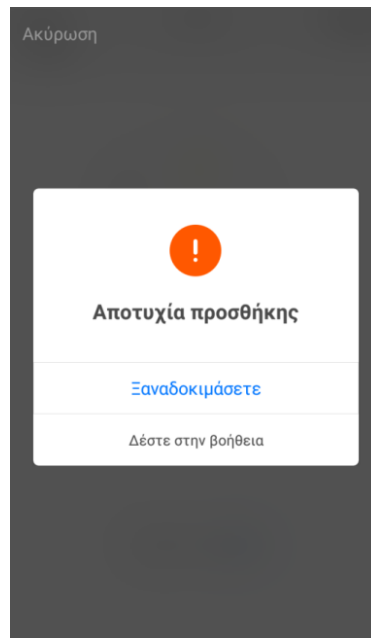



Image 8

Share devices - Share with your family

Through the application you can give the possibility to use the air fryer to an additional 3 users - members of your family. The devices of the users you will invite must be compatible. Consult the Important **Precautions section**.

Follow the steps below to complete the process:

- On the initial operating screen of the application, select the symbol  (Image 9).
- On the screen we select **Device Sharing** (Image 10).
- Then we select **Add Sharing** (Image 11).
- The application automatically recognizes the **Region-Country** you are in. Otherwise, you can choose it according to your choice.
- Fill in a valid mobile number and a new message will be sent to your registered phone inviting the user to install the app.

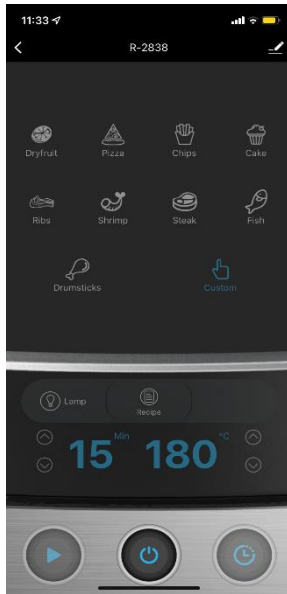


Image 9

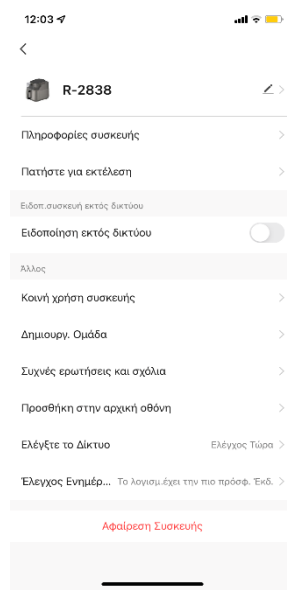


Image 10

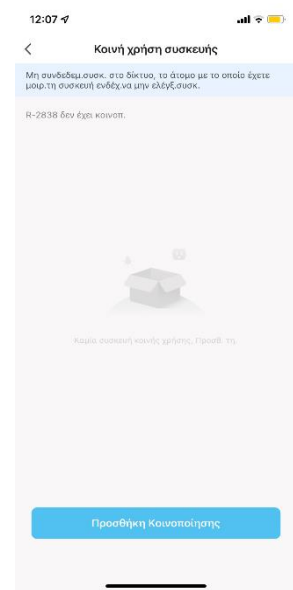


Image 11

Troubleshooting

Problem	Possible cause	Solution
The AIR FRYER does not work.	The appliance is not plugged in.	Put the mains plug in an earthed wall socket.
	You haven't pressed the start button.	Press the start/power button after you set the temp&time or choose the quick recipe.
The ingredients fried with the AIR FRYER are not done.	The amount of ingredients in the basket is too big.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly.
	The set temperature is too low.	Set the temperature to the required Temperature setting.
The ingredients are fried unevenly in the AIR FRYER.	Certain types of ingredients need to be shaken halfway through the preparation time .	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time.
Fried snacks are not crispy when they come out of the AIR FRYER.	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crisper result.
I can't slide the basket into the appliance properly.	There are too many ingredients in the basket.	Do not fill the basket beyond the MAX indication.
White smoke Comes out from the Appliance.	You are preparing greasy ingredients.	When you fry greasy ingredients in the AIR fryer, a large amount of oil will leak into the basket. The oil produces while smoke and the basket may heat up More than usual. This does not affect the appliance or the end result.
	The basket still contains grease residues from previous use.	White smoke is caused by grease heating up in the basket. Make sure you clean the basket properly after each use.

Fresh fries are fried Unevenly in the AIR FRYER.	You did not use the right potato type.	Use fresh potatoes and make sure that they stay firm during frying.
	You did not rinse the potato sticks properly before you fried them.	Rinse the potato sticks properly to remove starch from the outside of the sticks.
Fresh fries are not crispy when they come out of the AIR FRYER	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crisper result.

TECHNICAL SPECIFICATIONS

Radio equipment

The frequency bands in which the radio equipment operates are 2.4 GHz and the maximum broadcast power is 20dBm.

Frequency Bands: WIFI: 2.4 G Hz

Maximum broadcast power: 20 dBm

EN

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Ningbo Careline Electric Appliance Co., Ltd declares that the radio equipment type R-2838 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.vassilias.gr

GR

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ

Με την παρούσα ο/η Ningbo Careline Electric Appliance Co., Ltd δηλώνει ότι ο ραδιοεξοπλισμός του R-2838 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: www.vassilias.gr

BG

КРАТКА ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ

С настоящото, Ningbo Careline Electric Appliance Co., Ltd декларира, че радиосъоръжението тип R-2838 е в съответствие с Директива 2014/53 / ЕС. Пълният текст на ЕС декларацията за съответствие е достъпен на следния интернет адрес: www.vassilias.bg

RO

DECLARATIE DE CONFORMITATE EU SIMPLIFICATA

Ningbo Careline Electric Appliance Co., Ltd declara ca echipamentele radio tip R-2838 sunt conforme cu directiva 2014/53/EU. Textul complet al declaratiei de conformitate este disponibil la urmatoarea adresa de internet: <http://vassilias.ro>

CZ

ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ

Ningbo Careline Electric Appliance Co., Ltd tímto prohlašuje, že rádiové zařízení typu R-2838 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na následující internetové adrese: www.rohnson.cz

SK

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE

Ningbo Careline Electric Appliance Co., Ltd týmto vyhlasuje, že rádiové zariadenie typu R-2838 je v súlade so smernicou 2014/53/EU. Úplné znenie EÚ vyhlásenia o zhode je k dispozícii na nasledujúcej internetovej adrese: www.rohnson.cz



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

EU Declaration of Conformity

Name: Ningbo Careline Electric Appliance Co., Ltd

Address: No.558, Wei'er Road, Andong Industrial Zone, Hangzhou Bay New Area Ningbo, 315327 Zhejiang, China

Model No.: WA-501-W (R-2838)

Description: Air Fryer

Radio-related Software Version: Wi-Fi modular: WBR3

We, Ningbo Careline Electric Appliance Co., Ltd., declare under our sole responsibility that the product described above is in conformity with the relevant Union Harmonization Legislations:

RE Directive: 2014/53/EU RoHS: 2015/863/EU

The following harmonized standards and/or other relevant standards have been applied:

1. Health and Safety (Article 3.1(a) of the RE Directive)

■ EN62311:2020

2. Electromagnetic compatibility (Article 3.1(b) of the RE Directive 2014/30EU (EMCD))

■ EN 55014-1:2021

■ EN 55014-2:2015

3. Radio frequency spectrum usage (Article 3.2 of the RE Directive)

■ EN300 328V2.2.2

4. RoHS Directive (EU) 2015/863

■ EN50581:2012

The object of the declaration described above is in conformity with the following relevant Union harmonization legislation(s):

Radio Equipment Directive (RED)	2014/53/EU	■
Low Voltage Directive (LVD)	2014/35/EU	■
Electromagnetic Compatibility (EMC)	2014/30/EU	■
Restriction of the use of certain hazardous substances (Rohs)	2015/863/EU	■

The recognized third-party organization Ningbo Careline Electric Appliance Co., Ltd. performed the conformity assessment according to Annex II of the RE Directive and issued the EU-type examination certificate (Ref. No.: SHCR220900212801HSC)
Signed for and on behalf of Ningbo Careline Electric Appliance Co., Ltd.

Signature: 
Name: Yuppie 
Position: Sales Manager
Date: 2022/11/23
Place: Ningbo, China

