



FZS 5025-B

English	3–30
Česky	31–58
Slovensky.....	59–86
Magyar.....	87–114
Polski.....	115–142

Petrol brush cutter

USER'S MANUAL

Thank you for purchasing this petrol brush cutter. Before you start using it, please carefully read this user's manual and save it for possible future use.

CONTENTS

1. GENERAL SAFETY INSTRUCTIONS	5
Important safety notice	5
Packaging	5
User's Manual.....	5
2. EXPLANATION OF INSTRUCTION LABELS ON THE MACHINE	6
3. OPERATING INSTRUCTIONS.....	7
Safety instructions	7
Safety instructions	7
Safety instructions	8
4. Description of the machine	9
Included contents	10
5. ASSEMBLY.....	11
6. Mixing the fuel mix	14
Storing fuel.....	14
7. OPERATION	14
8. PREPARING FOR OPERATION	16
Points to check before starting work.....	16
9. SAFETY WORKING WITH BRUSH CUTTER	16
10. CUTTING	21
CUTTING WITH THE NYLON STRING TRIMMER HEAD	21
Trimming grass.....	21
Clearing and trimming edges.....	22
CUTTING USING THE BLADE	22
Cutting weeds	22
11. MAINTENANCE.....	24
12. TROUBLE SHOOTING GUIDE	26

13. DISPOSAL	28
14. DECLARATION OF CONFORMITY	29
15. TECHNICAL SPECIFICATIONS.....	30

1. GENERAL SAFETY INSTRUCTIONS

Important safety notice

- ✿ Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- ✿ Store the product in a dry place out of reach of children.
- ✿ Read all warnings and instructions. Not following warnings or instructions may lead to injury by electrical shock, a fire and/or serious injuries.

Packaging

The product is packed in a package that prevents damage during transport. This package is a resource and so can be handed over for recycling.

User's Manual

Before you start working with the machine, read the following safety and usage instructions. Acquaint yourself with the operating elements and the correct use of the machine. Keep the user's manual in a safe place where it can be easily retrieved for future use. Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt at least for the duration of the warranty. If you need to ship this machine, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair).



Note: If you hand over the machine to somebody else, do so together with the user's manual.

Following the instructions in the included user's manual is a prerequisite for the proper use of the machine.

The user's manual also contains operating, maintenance and repair instructions.

The manufacturer takes no responsibility for accidents or damages resulting from not following the instructions in this manual.

2. EXPLANATION OF INSTRUCTION LABELS ON THE MACHINE



Carefully read the manual before use



Do not use toothed blade



 
While working use protective aids



Danger of ricochet of the object during mowing



Caution, recoil!



Keep other persons (particularly children) and animals out of range, at least 15 m from the working area.

3. OPERATING INSTRUCTIONS

Safety instructions

Read carefully!

- ✿ Always wear a safety helmet, safety gloves, protective clothing (cut-resistant trousers) and safety footwear.
- ✿ Keep the machine out of children's reach.
- ✿ Never run the engine if there is only petrol in the petrol tank.
- ✿ Never pour in fuel if the engine is running or if it is still hot. Only fill up the engine when it is cold.
- ✿ Store fuel in a closed container in a dry and cool place.
- ✿ Adhere to safety directives.
- ✿ Check the work area prior to every use. Remove items that could be deflected or that could jam in the machine.
- ✿ When working, all other persons must be outside the range of at least 15 meters.
- ✿ Never use the machine without the protective cover (of the cutting blade) installed.
- ✿ Never fill up the petrol tank so that it is completely full.
- ✿ The fuel tank cap must be firmly tightened to prevent fuel from leaking out.
- ✿ Do not permit the machine to run at full speed if the petrol tank is empty.
- ✿ Never turn off the machine suddenly if it is running at full speed.
- ✿ Do not use the machine if it is damaged in any way. Contact a qualified service centre.
- ✿ When carrying, hold the entire machine because holding it only by the fuel tank is dangerous and may result in damage to the petrol tank and a fire.
- ✿ Always hold the brush cutter with both hands.
- ✿ Never place a hot brush cutter on to dry grass.
- ✿ Smoking is forbidden when working with the machine.

Safety instructions

Fuel

- ✿ During transport, the fuel tank of the brush cutter must be empty.
- ✿ Only transport fuel in approved canisters.
- ✿ Regularly inspect the fuel tank cap. It must be tightened and fuel must not leak out
- ✿ Protect the environment: take care to avoid a fuel spill and soil contamination.
- ✿ Start the machine at least 3 metres away from where you filled it up with fuel.
- ✿ Never fill up fuel in closed rooms. There must be sufficient ventilation in the room, risk of an explosion.
- ✿ Do not inhale fuel vapours. Wear safety gloves when pouring in fuel.
- ✿ Regularly replace and clean your protective clothing.

Safety instructions


Cutting tools

- ❖ When installing the cutting tool, check the condition of the blade. If it is damaged (cracked, bent, broken off, etc.), replace it.
- ❖ After installing the blade, check again that the hole in the blade is level with the arm of the blade tang.
- ❖ Spin the blade, check again that the blade has no tendency to rotate irregularly.
- ❖ Check that the blade is installed with the sharp edge moving in the direction of rotation. Never install it the other way around.
- ❖ Check that the cutting tool is properly assembled by turning it without load (1 minute is enough).
- ❖ An appropriate blade must be selected for the material that is to be cut.
- ❖ Never push the blade against objects when in operation. Material must be cut at reasonable speed.
- ❖ If you hear an unusual noise or the machine vibrates abnormally, stop working and identify the cause.
- ❖ Do not stop the machine while the blade is cutting a material. There is a danger of damaging the machine. The cutting tool must be fitted with an appropriate guard.

⚠ ATTENTION! If instructions are not followed, there is a danger of a serious or even fatal injury to persons!

- ❖ Acquaint all persons working with this machine with the operation of the machine and the safety instructions.

4. DESCRIPTION OF THE MACHINE

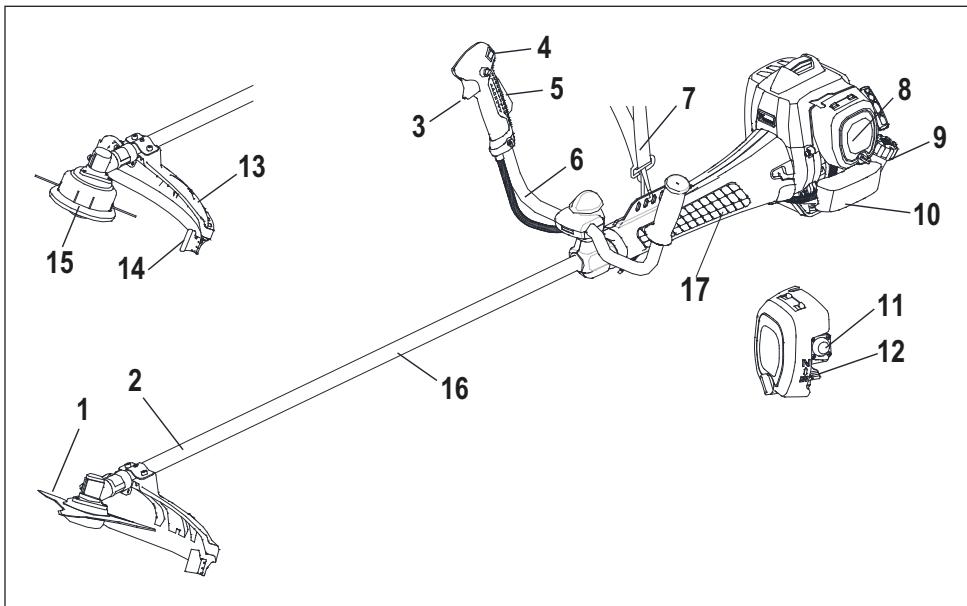

1. BLADE - Circular blade for grass, weed or brush cutting applications. Harness, plastic shield and U-Handles required for blade operation.
2. DRIVE SHAFT ASSEMBLY - Contains a specially designed inner flexible drive shaft.
3. THROTTLE TRIGGER - Spring loaded to return to idle when released. When accelerating, press trigger gradually for best operating technique. Do not hold trigger while starting.
4. IGNITION SWITCH - Move switch to position "I" to start, to position "O" to stop.
5. THROTTLE LOCKOUT - Before acceleration, compress it please.
6. U-HANDLE - this handle can be adjusted at your convenience for comfort.
7. HARNESS ASS'Y - an attachment which hangs the machine on the operator and adjustable in length.
8. AIR CLEANER COVER - Contains replaceable felt element.
9. FUEL TANK LID.
10. FUEL TANK - Contains fuel and fuel filter.
11. PRIMING BULB - Pressing the priming bulb pumps (7 to 10 times before starting), will remove all air and stale fuel from fuel system and bring fresh fuel to the carburetor.
12. CHOKE - the choke control is located on the side of the filter cover.
COLD STARTS Pull lever up to close choke for cold starts. Push lever down for RUN position.
13. DEBRIS SHIELD - Mounted just above the cutting attachment. Helps protect operator by deflecting debris produced during the trimming operation. Do not operate unit without shield.

14. CUT-OFF KNIFE - Trims nylon filament to the correct length-8", head to end of line-when nylon trimming head is bumped on the ground during the operation of advancing the line. If trimmer is operated without a cut-off knife the line becomes too long(more than 8") the operating speed will slow down the engine, this will overheat or damage the engine.
15. NYLON CUTTER HEAD - Contains replaceable nylon trimming line that advances when the trimmer head is tapped against the ground while the head is turning at normal operating speed.
16. JOINING ASS'Y.
17. CLUTCH COVER ASS'Y.

Included contents

TWIST & GO trimmer head, metal three tooth blade, shoulder strap, calibrated fuel mixing container, spare spark plug, hex key 4mm, hex key 5mm, 4x hex screw 5mm, 4x hex screw 4mm with nut (installed on the plastic guard mount), 2x draw bands, screwdriver, wrench 8/10, tubular wrench with a Philips screwdriver.

5. ASSEMBLY

Push the I part of the rod (1) right down until the latch (2) slots into the hole (3) in the rod. This is easier to do if you rotate the bottom of the rod (6) slightly in both directions. The latch (2) is in place when it is completely lodged in the hole. - Lastly, Press the latch cover(5) and then tighten the knob (4) securely.

INSTALLING HANDLE (A)

Install handle in bracket. Position handle in a comfortable operating position and tighten four M6×30 screws.

INSTALLING HANDLE (B)

Install handle and lower cap on the rubber cover, and tighten four M5×32 screws.

INSTALLING HANDLE

Install handle in bracket. Position handle in a comfortable operating position and tighten U Handle Screw Assy.

ADJUST U Handle

1. Rotate the U Handle Screw Assy counterclockwise to adjust the U Handle
2. Rotate the U Handle Screw Assy counterclockwise then Drag U Handle Lock Bar to Rotate the U Handle.

WARNING CAUTION

Do not attempt to disassemble the two special screws. The two clamps position has been adjusted at a suitable place,do not attempt to remove or move them. Otherwise,it can result in serious personal injury.

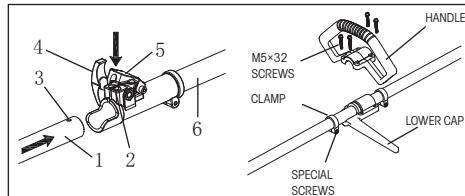


Fig. 1

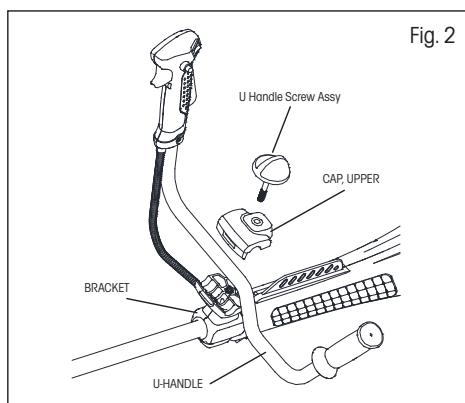
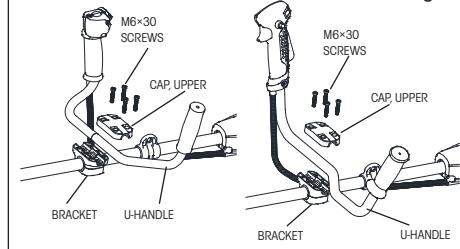


Fig. 2

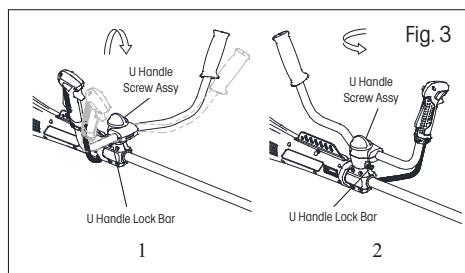


Fig. 3

INSTALLING PLASTIC SHIELD

Install the safety cover on the shaft with the safety cover bracket and the screws provided. Tighten the screws after setting the safety cover bracket at the appropriate position.

BLADE INSTALLATION

- Insert the hex key (2) into the specific hole in the angle transmission (3) and rotate the nut (7) by hand until the hex key enters the inner hole, blocking rotation.
- unscrew the nut (7) in a clockwise direction.
- Pull out blade cover (6) and the blade press board(5).
- Ensure that the grooves in the key gasket (4) mach up perfectly with the angle transmisson(3).
- Install the blade (1) and the blade press board(5).
- Refit the blade cover (6) and the nut (7),fully tightening it in an anticlockwise direction.
- Remove the hex key (2).

⚠ WARNING CAUTION

Do not use a steel blade for edging or scalping.

⚠ WARNING CAUTION

EXCESSIVE VIBRATION- STOP ENGINE IMMEDIATELY

Excessive vibration of blade means that it is not properly installed. Stop engine immediately and check blade.

Blade improperly installed will cause injury. Use only our company original cutting equipment parts when servicing and repairing the unit.

HEAD LINE INSTALLATION

Insert the hex key (2) into the specific hole in the angle transmission (3) and rotate the key gasket (4) by hand until the hex key enters the inner hole, blocking rotation.

- Ensure that the grooves in the key gasket (4). mach up perfectly with the angle transmisson(3).
- Fit the cutting line head (1) screwing it up in an anticlockwise direction. (see from cutting line head).
- Remove the hex key (2).

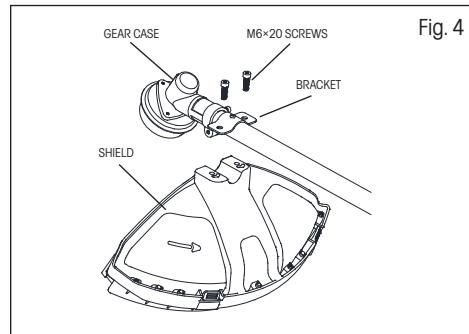


Fig. 4

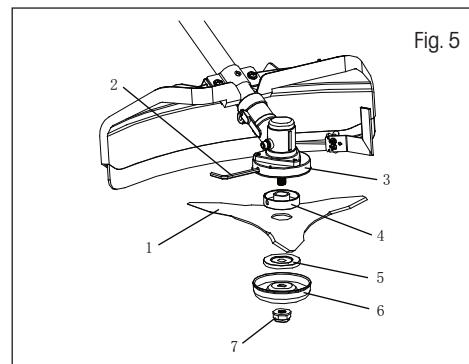


Fig. 5

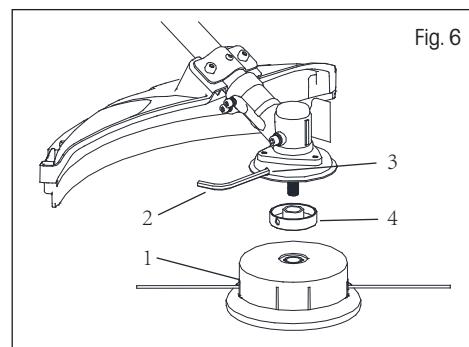
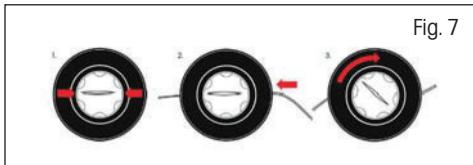


Fig. 6

⚠ WARNING CAUTION**INSTALLING NYLON LINE CUTTER HEAD**

Align hole in adapter plate with hole in shaft and install locking tool. Thread cutter head onto shaft (turning it clockwise) until it is tight. Remove locking tool.

Winding string trimmer line on the TWIST & GO trimmer head

6. MIXING THE FUEL MIX

40:1

⚠ WARNING!

- ❖ Never pour fuel into the fuel tank in a closed and unventilated location.
- ❖ Do not pour fuel in the vicinity of an open flame or a source of sparks.
- ❖ Do not overfill the petrol tank. Before starting the engine, make sure that all spilt fuel is wiped away.
- ❖ If the engine is hot, DO NOT POUR IN FUEL.
- ❖ **For this type of two-stroke engine a mixture of lead-free petrol and two-stroke engine oil is used at a ratio of 40 : 1.**

⚠ ATTENTION! A fuel mix that is mixed at a ratio other than 40:1 may damage the engine. Make sure that this fuel mix is mixed correctly.

- ❖ When mixing petrol with two-stroke engine oil, use only petrol containing NO ETHANOL or METHANOL (types of alcohols).
 - ❖ Use quality petrol with an octane number of 95 or higher. This will help prevent possible damage to the fuel system and other parts of the engine.
- We recommend the use of the calibrated container supplied with the brush cutter for mixing the fuel mix.
DO NOT MIX THE PETROL AND OIL DIRECTLY IN THE FUEL TANK.

Storing fuel

Only store fuel in a clear, safe and approved canister. Inform yourself about and adhere to local directives related to the type and storage of canisters filled with fuel.

⚠ IMPORTANT

Fuel for two-stroke engines may separate. Prior to every use, thoroughly shake the canister with fuel. Stored fuel ages. Do not mix more fuel than you expect to consume within one month.

7. OPERATION

ENGINE STARTING AND STOPPING PROCEDURES STARTING COLD ENGINE

1. Move the ignition switch to START position "I".
2. Give a gentle push on the primer pump repeatedly (7-10times) until fuel comes into the primer pump.
3. Pull the chock lever up to close choke "N".
4. Pull starter handle until engine false fires.
5. Push the chock lever to the run "III".
6. Pull starter handle until engine starts.
7. Allow engine to warm up for a few minutes before using.

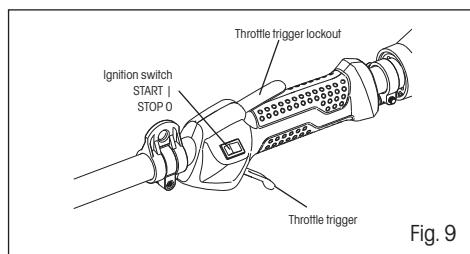


Fig. 9

STARTING WARM ENGINE


The choke lever to the run "I".

- ✿ If fuel tank was not run dry, pull starter one to three times and engine should start.
- ✿ If fuel tank was run dry, after refilling repeat steps 1-2-6.

STOPPING THE ENGINE

- ✿ Release the throttle trigger and allow the engine to run idle for a few seconds.
- ✿ Move switch to STOP position "O".

If the starter rope is pulled repeatedly with the choke on, it may flood the engine and make starting difficult. If you have flooded the engine, remove the spark plug and gently pull the handle on the starter rope to eliminate any excess fuel; then dry the spark plug electrodes and replace it on the engine.

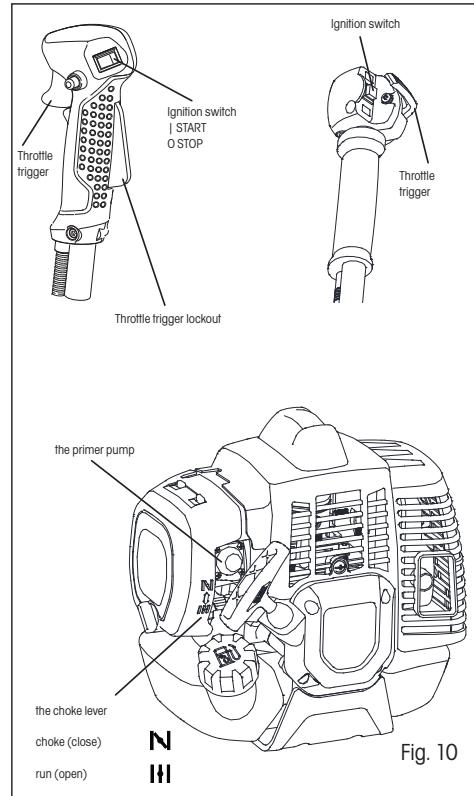

8. PREPARING FOR OPERATION

⚠️ IMPORTANT:

Follow instructions for preparing the fuel mix! Not following these instruction may damage the engine! Do not use fuel that has been stored for longer than two months. A fuel mix stored for longer than two months will cause problems at start up and lower engine performance. If the fuel mix is stored for longer than two months, it should be removed and new fuel must be used.

Points to check before starting work

1. Check whether any screws, nuts and installation elements are loose. Tighten any loose screws.
2. Check whether the air filter is dirty. Prior to starting work, remove all dirt from the air filter.
3. Make sure that the plastic head guard and the blade is securely fastened in place.
4. Check the fuel tank for leaks.
5. Check the blade or the string trimmer head for damage.


9. SAFETY WORKING WITH BRUSH CUTTER

USING THE SHOULDER HARNESS

1. Assemble and adjust the shoulder harness and belt, as shown.
2. Adjust the shoulder-harness button, and move the hook to your waist, then adjust the belt (If there is a belt).
3. Hang the latch tab on the harness hook.
4. If the brush cutter does't balance, then adjust the harness hanger, and the handlebar, until it balances.

⚠️ WARNING CAUTION

The hook is situated at your right hip, and the quick-release latch is situated at the outside.

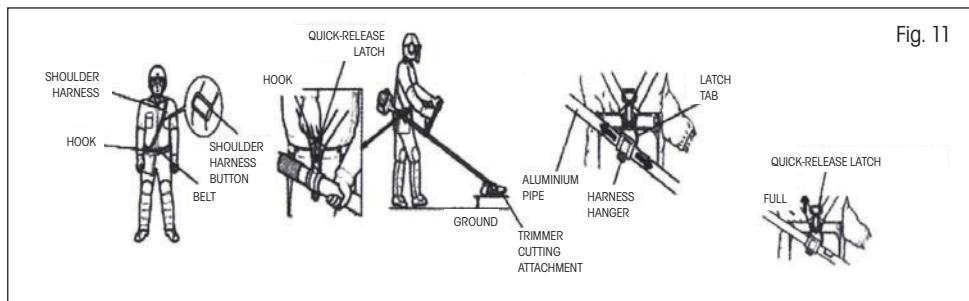

5. To quickly detach the brush cutter from the harness, pull the quick-release latch tab upward;
6. Insert the latch tongue in the slot of the quick-release latch to reattach the brush cutter to the harness.

⚠️ WARNING DANGER

Before using, please check the shoulder harness and confirm it is OK. Encounter danger, please stop the brush cutter immediately, and pull the quick-release latch tab, the brush cutter will be depart from your body.

CUTTING WITH A NYLON HEAD

Line head rotates in a counter CLOCKWISE direction. The CUT-OFF KNIFE will be on the right side of the debris shield.

⚠ WARNING DANGER

The proper debris shield must be in place on the unit when nylon cutting line is used. The cutting line can flap around if too much line is exposed. Always use the plastic debris shield with cut-off knife when using nylon cutting heads.

For nearly all cutting, it is good to tilt the line head so that contact is made on the part of the line circle where the line is moving away from you and the debris shield. (See appropriate picture) This results in the debris being thrown away from you.

⚠ WARNING DANGER



Tilting the head to the wrong side will shoot the debris TOWARDS you. If the line head is held flat to the ground so that cutting occurs on the whole line circle, debris will be THROWN at you, drag will slow the engine down, and you will use up a lot of lines.

⚠ WARNING DANGER

Use only quality nylon monofilament line of the diameter 2.5mm. Never use wire or wire-reinforced line in place of nylon trimmer line. Load your nylon line cutting head only with nylon trimmer line of the proper diameter.

⚠ WARNING DANGER

Use extreme caution when operating over bare spots and gravel, because the line can throw small rock particles at high speeds. Debris shields on the unit cannot stop objects which bounce or ricochet off hard surfaces.

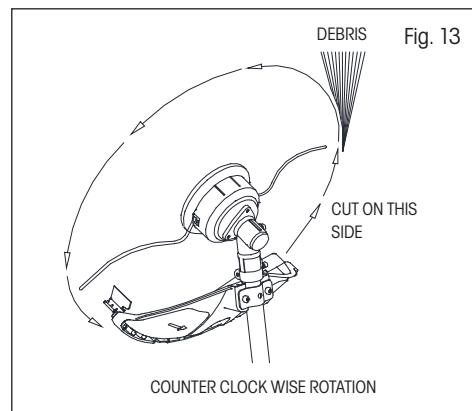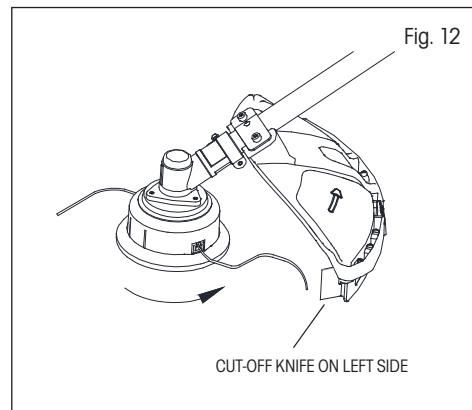

TRIMMING:

This is feeding the trimmer carefully into the material you wish to cut. Tilt the head slowly to direct debris away from you. If cutting up to a barrier such as fence, wall or tree .approach from an angle where anydebris ricocheting off the barrier will fly away from you. Move the line head slowly until the grass is cut right up the barrier, but do not jam(overfeed)the line into the barrier. If trimming up to a wire mesh or chain linked fence be careful to feed only up to wire. If you go to far the line will snap off around the wire. Trimming can be done to cut through weed stems one at a time. Place the trimmer line head near the bottom of the weed-never high up which could cause the weed to chatter and catch the line. Rather than cut the weed right through, just use the very end of the line to wear through the stem slowly.

⚠ WARNING DANGER

Do not use a steel blade for edging or scalping

SCALPING AND EDGING:

Both of these are done with the line head tilted at a steep angle scalping is removing top growth leaving the earth bear. Edging is trimming the grass back where it has spread over a sidewalk or drive way. During both edgingand scalping, hold the unit a steep angle and in a position where the debris, and any dislodging dirt and stones, will not come back towards you even if it ricochets off the hard surface. Although the picture shows how to edge and scalp every operator must find for himself the angles which suits his body size and cutting situation.

⚠ WARNING DANGER

Do not trim in any area where there are strands of fencing wire, Wear protective safty protecting. Do not cut where you cannot see what the cutting device is cutting.

CUTTING WITH A BLADE

There are many different types of blades, however the two most commonly used are the following.

Fig. 14



BRUSH BLADE is used for cutting brush and weeds up to 3/4" in diameter. Only 255mm 3-blade can be used in this type of brush cutter.

⚠ WARNING DANGER

DO NOT USE A BRUSH CUTTER FOR CUTTING TREES.

⚠ WARNING DANGER

Do not cut with dull, cracked or damaged metal blade. Before cutting growth, inspect for obstructions such as boulders, metal stakes or strands of wire from broken fences. If an obstruction cannot be removed, mark its location so that you can avoid it with the blade. Rocks and metal will dull or damage a blade. Wires can catch on the blade head and flap around or be thrown into the air.

Blade thrust is the reaction which may occur when the spinning blade contacts anything it cannot cut. This contact may cause the blade to stop for an instant, and suddenly 'thrust' the unit away from the object that was hit. This reaction can be violent enough to cause the operator to lose control of the unit. Blade thrust may occur without warning if the blade snags, stalls or binds. This is more likely to occur in areas where it is difficult to see the material being cut. For cutting ease and safety, approach the weeds being cut from the right to the left, in the event that an unexpected object or woody stock is encountered, this could minimise the blade thrust reaction.

SCYTHING WEEDS. This is cutting by swinging the blade in a level arc. It can quickly clear areas of field grass and weeds. Scything should not be used to cut large, tough weeds or woody growths.

BOOK NOTE

Do not use a brush blade to cut trees which exceed a diameter of 1/2 to 3/4 inches.

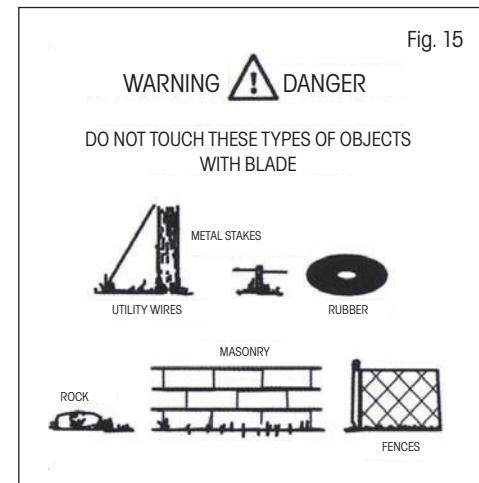


Fig. 15

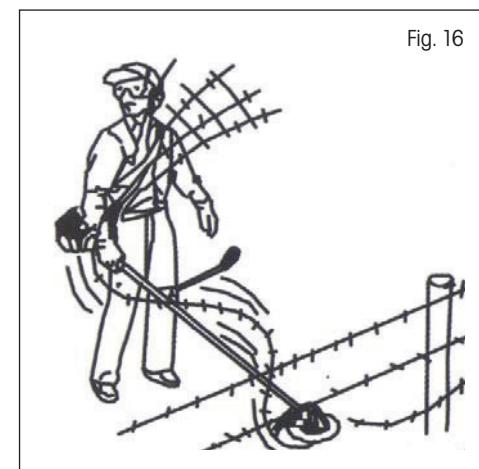


Fig. 16

Scything can be done in both directions, or just in one way which results in the debris being thrown away from you.

Use the side of the blade that it is rotating away from you. Tilt down the blade slightly on this same side. You will be hit by some debris if you scythe in both directions.

Do not force the blade to cut. Do not change the angle of cut after into the wood. Avoid using any pressure or leverage which could cause the blade to bind or crack.

Fig. 17



10. CUTTING

⚠ WARNING!

When working with any string trimmer or brush cutter model, there is a danger of deflecting stones, metal or small objects and the cut material. Carefully read all the safety directives.

Follow all the instructions provided in this user's manual.

⚠ WARNING!

Use head, eye, face and hearing protection. Use appropriate footwear that will protect your feet and which will ensure a firm stance on slippery surfaces. Do not wear ties, jewellery or loose clothing that could become caught in the moving parts of the tool. Do not wear footwear with an open tip. Do not work barefoot or with bare legs. In certain situations you must use full face and head protection.

Take care to avoid recoil and jamming of the blade.

⚠ WARNING

Always use the shoulder strap.

Set the shoulder strap and its hitch on the tool so that the brush cutter is suspended several centimetres above the terrain. The head of the brush cutter and the metal guard must be level in all directions. Hang the brush cutter on the right side of the body.

⚠ DANGER ZONE

NOBODY APART FROM THE OPERATOR MAY ENTER THE DANGER ZONE OF A 15 METRE RADIUS. THE OPERATOR MUST USE APPROPRIATE EYE, HEARING, FACE, FOOT, LEG AND BODY PROTECTION. PERSONS LOCATED IN THE DANGER ZONE OR IN THE RISK ZONE AFTER THE DANGER ZONE MUST USE EYE PROTECTION AGAINST DEFLECTED OBJECTS. THE RISK IS REDUCED WITH INCREASING DISTANCE FROM THE DANGER ZONE.

CUTTING WITH THE NYLON STRING TRIMMER HEAD

- ✿ The string trimmer head rotates CLOCKWISE.
- ✿ **The trimmer line is extended out semi-automatically. While trimming, simply gently tap the head on the ground, which will push down the button on the underside of the head and the string trimmer line will slide out. The string trimmer line is then shortened to the maximum permitted length on the blade integrated in the plastic guard.**

Trimming grass

- ✿ During this activity, carefully move the trimmer into the material that you wish to trim. Slowly tilt the head so that the trimmed material is ejected away from you. If you are trimming all the way up to obstacles such as fences, walls and trees, then approach at such an angle that all material is ejected away from you. Slowly move the head with the nylon string trimmer line from right to left until the grass is trimmed all the way to the obstacle but avoid the string trimmer line coming into contact with the obstacle.
- ✿ When trimming in the vicinity of a wire fence or enclosure, proceed carefully so as not to come into contact with the wires. If you exceed the minimum distance from the fence, the string trimmer line will be shortened after impact.

- ❖ When cutting weeds, it is possible to cut one stem at a time. Place the trimmer head with string trimmer line at the bottom part of the weed - never the top because the stem may start quivering and the string trimmer line may become caught in it. Rather than attempting to cut the weed directly, it is better to use only the end of the string trimmer line and to cut the stem slowly.

Clearing and trimming edges

- ❖ Both these tasks are performed using the head with the nylon line tilted at large angle. Clearing means removing the top vegetation after which only soil remains.
- ❖ Trimming edges means trimming the grass at the edge of lawns that extends on to footpaths and roads.
- ❖ While clearing and trimming edges, hold the tool at a steep angle and in a position where dirt, cut material and stones will not be ejected backwards towards you in the event that they ricochet from a hard surface. Despite the pictures showing how to perform clearing and trimming of edges, every user must find their own position that will suit their body dimensions and working conditions.

⚠ WARNING

If a head with a nylon line is used, the correct protective guard must be fitted. If the nylon line extends out too far, it may start fluttering. If you use a head with a nylon line, always use the protective plastic guard with the cutter blade.

⚠ WARNING

Be very careful when working above soil or gravel because the nylon line may deflect small stones at a very high speed.

The protective guard on this tool cannot stop objects that ricochet off hard surfaces.

⚠ WARNING

Do not trim in places where there are wires and wire mesh. Use protective aids. Do not trim in locations where you cannot see what the trimmer is trimming.

CUTTING USING THE BLADE

Cutting weeds

- ❖ This is cutting performed by a pendular movement of the blade in an arch shape. In this way you can quickly clear a large area of dense grass and weed. Brush cutting should be used for cutting large and tough weeds or woody vegetation.
- ❖ Brush cutting may be performed in both directions or only in one direction, which will mean that the cut material will be ejected away from you. With this type of cutting, the part of the blade moving away from you will do the work. Slightly tilt the blade down to the same side. If you will be brush cutting in both directions, you will be hit by some deflected material.

 **Note:** Do not use the brush cutter blade for cutting trees with a diameter larger than 12 mm.

⚠ WARNING

DO NOT TOUCH THE FOLLOWING OBJECTS WITH THE BLADE:
METAL POLES, ELECTRICAL WIRE, RUBBER, MASONRY, STONES, FENCES

⚠ WARNING

Do not cut if the metal blade is blunt, cracked or damaged.

Before starting to cut, check that there are no obstacles in the work area such as rocks, metal poles or wound up wires. If you cannot remove these obstacles, mark them out so that they do not come in contact with the blade. Rocks or metal objects will blunt or damage the blade. Wires may wind on to the blade head or may be deflected and cause injuries.

11. MAINTENANCE

⚠ WARNING CAUTION

Use only original manufacturer's replacement parts, accessories and attachments. Failure to do so can cause possible injury, poor performance and may void your warranty.

- ✿ The cutting attachment must not rotate in idle mode. If this requirement is not satisfied, the clutch has to be adjusted or the machine needs an urgent maintenance by a qualified technician.
- ✿ You may make adjustments and repairs described here. For other repairs, have the trimmer serviced by an authorized service agent.
- ✿ Consequences of improper maintenance may include excess carbon deposits resulting in loss of performance and discharge of black oily residue dripping from the muffler.
- ✿ Make sure all guards, straps, deflectors and handles are properly and securely attached to avoid the risk of personal injury.

EXHAUST PORT AND SILENCER

- ✿ Depending on the type of fuel used, the type and amount of oil used, and/or your operating conditions, the exhaust port and silencer may become blocked with carbon deposits. If you notice a power loss with your petro-powered tool, a qualified service technician will need to remove these deposits to restore performance.

Air filter

- ✿ Accumulated dust in the air filter will reduce engine efficiency. Increase fuel consumption and allow abrasive particles to pass into the engine. Remove the air filter as often as necessary to maintain in a clean condition.
- ✿ Light surface dust can readily be removed by tapping the filter. Heavy deposits should be washed out in suitable solvent.
- ✿ Remove filter cover by take down the knob.

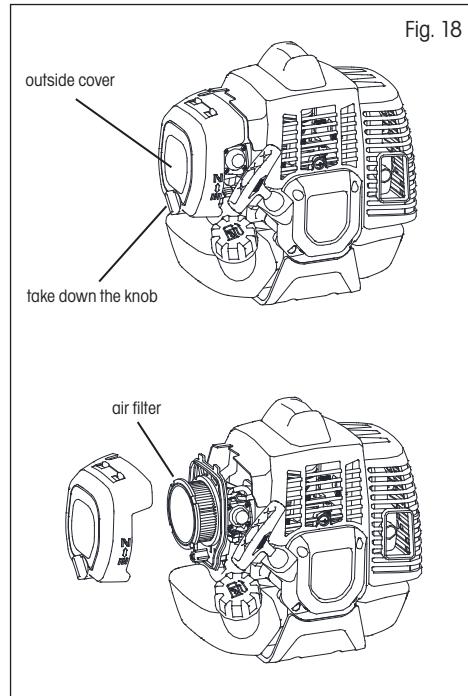


Fig. 18

ADJUSTING CARBURETOR NOTE

Do not adjust carburetor unless necessary. If you have trouble with the carburetor, see your dealer. Improper adjustment may cause engine damage and void warranty.

Fuel filter

- ✿ Fuel tank is fitted with a filter. Filter is situated at the free end of fuel pipe and can be picked out through fuel port with a piece of hooked wire or the link.
- ✿ Check the fuel filter periodically. Do not allow dust to enter into fuel tank. Clogged filter will cause difficulty in starting engine or abnormalities in engine performance.
- ✿ When filter is dirty, replace the filter.
- ✿ When the inside of the fuel tank is dirty, it can be cleaned by rinsing the tank out with gasoline.

Spark plug

- ✿ Do not attempt to remove the plug from a hot engine in order to avoid possible damage to the threads.
- ✿ Clean or replace the plug if fouled with heavy oily deposits.
- ✿ Replace the plug if the center electrode is worn rounded at the end.
- ✿ Spark gap 0.6–0.7mm (0.023"–0.028")
- ✿ Fastening torque =14–15Nm(125–135in.lb)

Bevel gear

After working (40–50) hours, fill with the right quantity of grease.

Remove the screw and put in the lithium-based grease. turning the shaft manually until grease emerges, then refit the wash the screw.

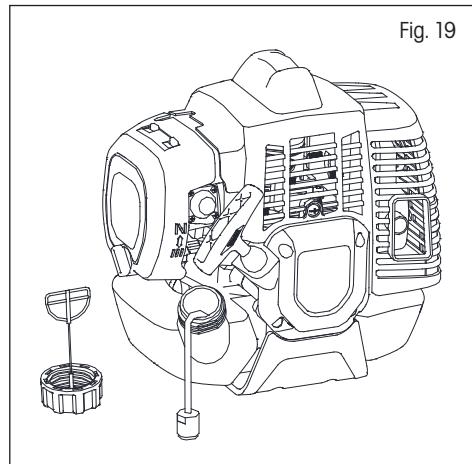


Fig. 19

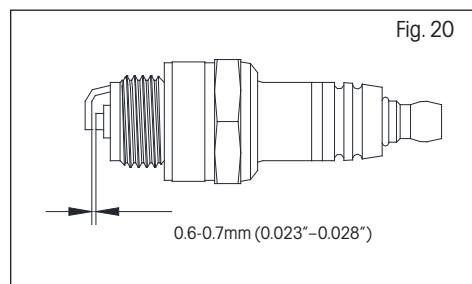


Fig. 20

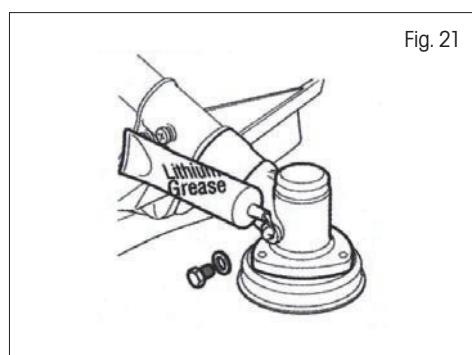


Fig. 21

12. TROUBLE SHOOTING GUIDE

1. FAILURE TO START

symptom			probable cause	remedy
cylinder compress pressure normal	spark plug spark normal	fuel system abnormality	there is no fuel in tank	add fuel in tank
			fuel filter obstructed	clean fuel filter
			fuel is too dirty	replace fuel
			there is water in fuel	replace fuel
			there is too much	take down spark plug
	fuel system normal	fuel system normal	fuel in cylinder	and dry it
			mixture ratio is improper	mixture proration
			spark plug fouled with oily deposits	clean the oily deposits
			spark plug insulation damage	replace spark plug
			spark gap is too large or small	adjust spark gap 0.6-0.7mm
fuel system normal	ignition system normal	high voltage wire spark normal		high voltage wire breach or break off coil looseness
		high voltage wire spark abnormality		replace or tighten tighten
		compression pressure is inadequate		piston ring attrite piston ring is broken Piston ring cementation spark plug looseness conjoint surface of the cylinder and crankcase leak
		compression normal		high voltage wire and spark plug contact poor stop switch failure or short circuit
				tighten the spark plug cap repair or replace

2. LOW OUTPUT

symptom	probable cause	remedy
flameout when speedup the smoke is thin, carburetor spout backward	fuel filter obstruct, fall short of fuel muffler fouled with oily deposit	clean fuel filter, clean fuel road adjust carburetor clean the oily deposits
compress press is inadequate	Piston, piston ring, cylinder attrite,	replace piston, piston ring
engine leak	conjoint surface of the cylinder and crank cass leak	repair
the end of two crank shaft leak	the seal is bad	replace seal
others	engine overheats burning room fouled with oily deposits	avoid use it for long time, high speed and heavy load clean the oily deposits

3. ENGINE RUNNING UNSTABLE

symptom	probable cause	remedy
there are knock sound in engine	piston, piston ring, cylinder attrite, piston pin, piston attrite bearing of crank shaft attrite	replace piston, piston ring replace piston pin, piston replace bearing
there are metal knock sound	engine overheats burning room fouled with oily deposits gasoline branded is unfit	avoid use it for long time, high speed and heavy load clean the oily deposits replace with required branded octane
engine ignition break off	there is water in fuel spark gap is wrong coil gap is wrong	instead fuel adjust spark gap 0.6-0.7mm adjust coil gap 0.3-0.4mm

4. THE ENGINE SUDDENLY STOPPED

probable cause	remedy
fuel has been used up	add fuel
spark plug fouled with oily deposits and short circuit	clean the oily deposits
high voltage wire fall off	connect

13. DISPOSAL

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



The machine and its accessories are manufactured from various materials, e.g. metal and plastic.

Take damaged parts to a recycling centre. Inquire at the relevant government department.



This product meets all the basic requirements of EU directives that apply to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make these changes.

User s manual in the original language.

14. DECLARATION OF CONFORMITY



FAST ČR, a.s.
Černokostelecká 2111, 100 00 Praha 10, Czech Republic
tel.: +420 323 204 111, fax: +420 323 204 110

EU DECLARATION OF CONFORMITY

Product / brand: Gasoline Brush Cutter and Grass Trimmer / FIELDMANN

Type / model: FZS 5025-B as factory model ZMG 5315T1U
51,7 cm³; 1,45kW (7500/min⁻¹), rotation 10000/min⁻¹
 $L_{PA} = 99,2\text{dB(A)}$, $L_{WA} = 115\text{dB(A)}$

Manufacturer: FAST ČR, a.s.
Černokostelecká 2111, 100 00 Praha 10, Czech Republic
VAT no: CZ26726548

The product is inline with directives and regulations listed below:

Directive MD 2006/42/EC
Directive EMC 2014/30/EU
Directive Noise 2000/14/EU
Directive Emission of Gaseous 2016/1628/EU
Directive RoHS 2011/65/EU

and norms:

EN ISO 11806-1:2011
EN ISO 14982:2009



Place of issuance: Prague

Name: Ing. Zdeněk Pech
Chairman of the Board

Date of issuance: 9. 11. 2021

Signature:

FAST® FAST ČR, a.s.
Černokostelecká 1621, 251 01 Říčany
IČO: 26726548 tel.: +420/ 323 204 111
DIČ: CZ26726548 fax: +420/ 323 204 110

IČO: 26 72 65 48, DIČ: CZ-26 72 65 48

Bankovní spojení: Komerční banka Praha 1, č.ú. 89309011/0100, Česká spořitelna Praha 4,
č.ú. 2375682/0800, ČSOB Praha 1, č.ú. 8010-0116233383/0300

15. TECHNICAL SPECIFICATIONS

Model	FZS 5025 B
Displacement	51,7 cm ³
Maximum power output of engine	1.45 kW (7500 RPM)
Length of shaft	1500 mm
Type of motor	2-stroke air cooled
Trimmer line diameter	2.4 mm
Fuel mix ratio (oil for 2-stroke engines/Lead-free 95)	1:40
Weight without fuel and cutting tools	8,5 kg



Model /Modell /Modelis:

**Záruční list / Záručný list /
Warranty Certificate / Jótállási jegy /
Garantijos taisyklys / Karta Gwarancyjna**

Výrobní číslo
Výrobné číslo
Serial No.
Széria szám
Serijos Nr.
Numer seryjny

Razítko a podpis prodejce
Pečiatka a podpis predajcu
Dealer's stamp
A kereskedő bélyegzője
Pardavéjo antspaudas
Pieczętka i podpis sklepu

Datum prodeje
Dátum predaja
Date of purchase
A vásárlás dátuma
Pardavimo data
Data zakupu

Záruční podmínky

Prodávající poskytuje kupujícímu na výrobek záruku v trvání 24 měsíců od převzetí výrobku kupujícím. Záruka se poskytuje za dálé uvedených podmínek. Záruka se vztahuje pouze na nové spotřební zboží prodané spotřebiteli pro běžné domácí použití. Práva z odpovědnosti za vady (reklamací) může kupující uplatnit bud' u prodávajícího, u kterého byl výrobek zakoupen nebo v níže uvedeném autorizovaném servisu. Kupující je povinen reklamaci uplatnit bez zbytečného odkladu, aby nedocházelo ke zhoršení vady, nejdpozdiž však do konce záruční doby. Kupující je povinen poskytnout při reklamaci součinnost nutnou pro ověření existence reklamované vady. Do reklamačního řízení se přijímá pouze kompletní a z důvodu dodržení hygienických předpisů neznečištěný výrobek. V případě oprávněné reklamace se záruční doba prodlužuje o dobu od okamžiku uplatnění reklamace do okamžiku převzetí opraveného výrobku kupujícímu nebo okaříku, kdy je kupující po skončení opravy povinen výrobek převzít. Kupující je povinen prokázat svá práva reklamovat (doklad o zakoupení výrobku, záruční list, doklad o uvedení výrobku do provozu...).

Záruka se nevztahuje zejména na:

■ vady, na které byla poskytnuta sleva ■ opotřebení a poškození vzniklé běžným užíváním výrobku ■ poškození výrobku v důsledku neodborné či nesprávné instalace, použití výrobku v rozporu s návodem k použití, platnými právními předpisy a obecně známými a obvyklými způsoby používání, v důsledku použití výrobku k jinému účelu, než ke kterému je určen ■ poškození výrobku v důsledku zanedbané nebo nesprávné údržby ■ poškození výrobku způsobené jeho znečištěním, nehodou a zášadem vyšší moci (zivelná událost, požár, vniknutí vody...) ■ vady funkčnosti výrobku způsobené nevhodnou kvalitou signálu, rušivým elektromagnetickým polem apod. ■ mechanické poškození výrobku (např. ulomení knoflíku, pád...) ■ poškození způsobené použitím nevhodných médií, náplní, spotřebního materiálu (baterie) nebo nevhodnými provozními podmínkami (např. vysoké nekoliny teploty, vysoká vlhkost prostředí, otřesy...) ■ poškození, úprava nebo jiný zásah do výrobku provedený neoprávněnou nebo neautorizovanou osobou (servisem) ■ případy, kdy kupující při reklamaci neprokáže oprávněnost svých práv (kdy a kde reklamovaný výrobek zakoupil) ■ případy, kdy se údaje v předložených dokladech liší od údajů uvedených na výrobku ■ případy, kdy reklamovaný výrobek nelze ztotožnit s výrobkem uvedeným v dokladech, kterým kupující prokazuje svá ■ práva reklamovat (např. poškození výrobního čísla nebo záručnej plomby přístroje, přepísané údaje v dokladech...)

Záručné podmienky

Prodávajúci poskytuje kupujúcemu na výrobok 24 mesiacov záruku od jeho prevzatia kupujúcim. Záruka sa poskytuje ďalej za nižšie uvedených podmienok. Záruka sa vzťahuje iba na spotrebny tovar predaný spotrebiteľovi v bežnej domácej použití. Práva zo zodpovednosti za chyby (reklamácie) môže kupujúci uplatniť bud' u prodávajúceho, u ktorého bol výrobok zakúpený alebo v nižšie uvedenom autorizovanom servise. Kupujúci je povinný reklamáciu uplatniť bez zbytočného odkladu, aby nedochádzalo ku zhoršeniu chyby, najneskor však do konca záručnej doby. Kupujúci je povinný pri reklamácii spolupracovať pri ovieri existence reklamovanej chyby. Do reklamačného procesu sa prijíma iba kompletný a z dôvodu dodržania hygienických predpisov neznečištenej výrobok. V prípade oprávnenej reklamácie sa záručná doba predĺžuje o dobu od okamžiku uplatnenia reklamácie do okamžiku prevzatia opraveného výrobku kupujúcim, kedy je kupujúci po skončení opravy povinný výrobok prevziať. Kupujúci je povinný preukázať svoje práva reklamovať (doklad o zakúpení výrobku, záručný list, doklad o uvedení výrobku do prevádzky...).

Záruka sa nevztahuje na:

■ chyby, na ktoré boli poskytnuté zľavy ■ opotrebenia a poškodenia vzniknuté bežným užíváním výrobku ■ poškodenie výrobku v dôsledku neodbornej či nesprávnej inštalácie, použitie výrobku v rozporu s návodom na použitie s platnými právnymi predpismi a všeobecne známymi a obvyklými spôsobmi používania, v dôsledku použitia výrobku za iným účelom, než na ktorý je určený ■ poškodenie výrobku v dôsledku zanedbanej alebo nesprávnej údržby ■ poškodenie výrobku spôsobené jeho znečistením, nehodou a zášadem vyšej moci (zivelná udalosť, požiar, vniknutie vody...) ■ chyby funkčnosti výrobku spôsobené nevhodnou kvalitou signálu, rušivým elektromagnetickým polom a pod. ■ mechanické poškodenie výrobku (napr. zlomenie gombíka, pád...) ■ poškodenie spôsobené použitím nevhodných médií, náplní, spotřebního materiálu (batérie) alebo nevhodným převádzkovým podmínkami (napr. vysoké teploty v okolí, vysoká vlhkost prostředí, otřesy...) ■ poškodenie, úprava alebo iný zásah do výrobku spôsobený neoprávněnou alebo neautorizovanou osobou (servisem) ■ případy, kdy kupující pri reklamácii neprekáže oprávněnost svojich práv (kdy a kde reklamovaný výrobek zakoupil) ■ případy, kdy sa údaje v predložených dokladoch lišia od údajov uvedených na výrobku ■ případy, kdy reklamovaný výrobok sa nestotožňuje s výrobkom uvedeným v dokladoch, ktorým kupující preukazuje svoje práva reklamovať (napr. poškodenie výrobného čísla alebo záručnej plomby prístroja, prepísané údaje v dokladoch...)

Conditions of guarantee

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end-user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation...

This warranty is void especially if apply as follows: ■ Defects which were put on sale. ■ Wear-out or damage caused by common use. ■ The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for. ■ The product was damaged by uncared-for or insufficient maintenance. ■ The product was damaged by dirt, accident of force majeure (natural disaster, fire, flood, ...). ■ Defects on functionality caused by low quality of signal, electromagnetic field interference etc. ■ The product was mechanically damaged (e.g. broken button, fall, ...). ■ Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes, ...). ■ Repair, modification or other failure action to the product by unauthorized person. ■ End-user did not prove enough his right to claim (time and place of purchase). ■ Cases when the claiming product can not be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Autorizovaná servisní střediska / Autorizované servisné strediská / Authorized service centres

FASTČR, a. s.
U Sanitasu 1621 CZ
251 01 Říčany
Česká republika
Tel.: +420/ 323 204 120
Fax: +420/ 323 204 121
servis.praha@fastcr.cz
www.fastcr.cz

FAST ČR, a. s.
Cejl 31
CZ 602 00 Brno
Česká republika
Tel.: +420/ 531 010 295
Fax: +420/ 531 010 296
servis.brno@fastcr.cz
www.fastcr.cz

Fast Plus, a. s.
Na Pántoch 18
SK 831 06 Bratislava
Slovenská republika
Tel.: +421/ 249 105 811
Fax: +421/ 249 105 810
fastplus@fastplus.sk
www.fastplus.sk

Jótállási jegy

■ A termék gyártója: FAST ČR, a.s. (U Sanitasu 1621, Říčany u Prahy 251 01, Csehország)
■ A FAST Hungary Kft. (2310 Szigetszentmiklós, Kátor út 10.) mint a termék magyarországi importőre a jótállási jegyen feltüntetett típusú és gyártási számú készülékre jótállást biztosít a fogyasztók számára az alábbi feltételek szerint:
■ A FAST Hungary Kft. a termékre a fogyasztó részéről történő átadásról (vásárlásról), illetve ha az üzemele helyezést a termékért értékesítő vállalkozás vagy annak megbízottja végzi, az üzemele helyezéstől számított 24 hónapig, még 250.000,- Ft eladási ár felett 36 hónapig tartó időtartamra vállal jótállást. Ha a termék a fogyasztó az átadástól számított fél éven belül helyezeti üzemele, akkor a jótállási határidő a termék átadásától kezdődik. A termék alkotórészeire és tartozékaire (pl. akkumulátor) a jótállási idő a termék átadásától számított 12 hónap.
■ A jótállási igény a jótállási jeggyel, az átadástól (ha releváns az üzemele helyezéstől) számított (i) 1 évig - 100.000,- Ft eladási árat meg nem haladó termék esetén; (ii) 2 évig - 250.000,- Ft eladási árat meg nem haladó termék esetén; (iii) 3 évig - 250.000,- Ft eladási árat meghaladó termék esetén a termékét értékesítő vállalkozásnál, annak székhelyén, vagy bármely telephelyen, fióktelepen, illetve mindenharom esetben a jótállási jegyen feltüntetett hivatalos szerviznél közvetlenül is, mik az előző (i) pont szerinti esetben, azaz 100.000,- Ft eladási árat meg nem haladó termék esetén a 13. hónaptól a 24. hónapig kizárolag a hivatalos szerviznél érvényesithető. ■ Jótállási jegy hiányában a fogyasztó szerződés megkötését bizonyítószámla kell tekinteni, ha a fogyasztó bemutatja a termék ellenértékének megfizetését hitelről érdemlően igazoló bizonylatot. Mindezek érdekében kérjük, tisztelettel Vásárlónak, hogy örizzék meg a fizetési bizonylatot is. A jótállási időn belül meghibásodás esetén a fogyasztó - vállalására szerint - (i) a hibás termék díjmentes kijávitását vagy kicszerelést követelheti, kivéve, ha a vállalásnak igény teljesítését elutasította, vagy ha az a jótállásra kötelezettnak a fogyasztó által érvényesített kiáltási jogának meghibásodás esetén a fogyasztó - (ii) a hibás termék díjmentes kijávitását, illetve kicszerelést nem vállalata, vagy e kötelezettségeknek megfelelő határidőn belül, a fogyasztó érdekeit kimelve nem tud eleget tenni, vagy ha a fogyasztónak a kijávitáshoz vagy kicszereléshez fűződő érdeke megszűnt, akkor a fogyasztó megfelelő árbeszállítást igényelhet, vagy a hibát a kötelezettségeire maga kijávithatja vagy másállal kijávithatja vagy elállhat a szerződéstől. Jelentéktelen hiba miatt

elállásnak nincs helye. A fogyasztó a vállalásról jogáról másikra téphet át. Az áttéréssel okozott költséget köteles a jótállásra kötelezettnak megfizetni, kivéve, ha az áttérésre a jótállásra kötelezettnak adott okot, vagy az áttérés egyébként indokolt volt. ■ Ha a jótállási időtartam alatt a termék első alkalommal történő javítása során megállapítást nyer, hogy a termék nem javítható, a fogyasztó eltérő rendelkezése hiányában a termék a megállapítást követő 8 napon belül kicsérélésre kerül. Ha a termék cseréjére nincs lehetőség, a fogyasztó által bemutatott, a termék ellenértékének megfizetését igazoló bizonylaton feltüntetett vételárat nyolc napon belül kell a fogyasztó részére visszatéríteni. ■ Ha a jótállási időtartam alatt a termék három alkalommal történő kijávitásra követően ismét meghibásodik, a fogyasztó eltérő rendelkezése hiányában, valamint ha a fogyasztó nem igényeli a vételár arányos leszállítását, és nem kívánja a termék a jótállásra kötelezettsége kijávitani vagy másállal kijávittatni, a termék 8 napon belül kicsérélésre kerül. Ha a termék kicsérélésére nincs lehetőség, a fogyasztó által bemutatott, a termék ellenértékének megfizetését igazoló bizonylaton feltüntetett vételárat nyolc napon belül kell a fogyasztó részére visszatéríteni. ■ Ha a termék kijávitásra a kijávitási igény közlésétől számított 30. napig nem kerül sor a fogyasztó eltérő rendelkezése hiányában a termékkel a 30 napos határidő eredménytelen elteltek követő nyolc napon belül cseréni kell. Ha a termék cseréjére nincs lehetőség, a fogyasztó által bemutatott, a termék ellenértékének megfizetését igazoló bizonylaton feltüntetett vételárat a 30 napos kijávitási határidő eredménytelen elteltek követő nyolc napon belül kell a fogyasztó részére visszatéríteni. ■ A fogyasztó a hiba feldezséssel követően késedelem nélkül, legkésőbb a felfedezéstől számított 2 hónapon belül köteles a hibát közölni. A bejelentés kapcsán körüljár vege figyelembe, hogy a jótállási igény kizárolag a jótállási határidőben érvényesithető! Mindazonáltal a jótállási határidő meghosszabbodik a javításra átadás napjától kezdve azzal az idővel, amely alatt a fogyasztó a termékkel a hiba miatt rendelte-tessére nem használhatta. Ha a jótállásra kötelezettségének megfelelő határidőben nem tesz eleget, a jótállási igény a fogyasztó erre irányuló felhívásában tüzött megfelelő határidő eltelétével számított 3 hónapon belül akkor is érvényesítető bíróság előtt, ha a jótállási idő már eladt. E határidő elmulasztása jogvesztéssel jár. A jótállási kötelezettség teljesítésével kapcsolatosan felmerülő költségek a jótállás kötelezettséjtől terhelik.

■ A 151/2003. (IX.22.) Korm.rendeletben meghatározott tartós fogyasztási cikk meghibásodásá miatt a vásárlástól (üzembe helyezéstől) számított hárómunkanapon belül érvényesített csereigény esetén a termékét értékesítő vállalkozás nem hivatkozhat aránytalan többletköltségre, hanem köteles a tartós fogyasztási cikket kicséríni, feltéve, hogy a meghibásodás a rendeltekesszerű használatnak akadályozza (és a cseleme nem lehetetlen). ■ Kijavítás esetén a fogyasztási cikkbe csak új alkatrész kerülhet beépítésre. Javitási- vagy csereigény esetén törekedni kell arra, hogy a kijavítás vagy kijavítás 15 napon belül megtörténjen. Ha a javítás vagy a cseleme időtartama a 15 napot meghaladja, akkor tájékoztatni kell a fogyasztót a kijavítás vagy a cseleme várható időtartamáról. A tájékoztatás a fogyasztó előzetes hozzájárulása esetén elektronikus úton, vagy a fogyasztó általi átvétel iga-zolására alkalmás más módon történik. A rögzített bekötésű, illetve a 10kg-nál súlyosabb, vagy tömegközlekedési eszközön kezű csomagként nem szállítható fogyasztási cikkek - járművek kivételével - az üzemeltetés helyén kell megtávítani. Ha a javítás az üzemeltetés helyén nem végezhető el, a le- és felszerelésről, valamint az el- és visszaszállításról a jótállás kötelezettséje, vagy - a javítószolgálatnál közvetlenül érvényesített kijávitási igény esetén - a javítószolgálat gondoskodik. ■ Nem tartozik jótállás alá a hiba és a jótállásra kötelezettség mentesül a jótállási kötelezettség alól, ha a bizonyítja, hogy a hiba oka a termék fogyasztó részére való átadását követően keletkezett, így például ha a hibát ■ nem rendeltekesszerű használat, használati útmutató figyelmen kívül hagyása, helytelen szállítás vagy tárolás, leejtés, rongálás, elemi kár készüléken kívülük álló (pl. hálózati feszültség megengedettnél nagyobb ingadozása) ■ illetéktelen átalakítás, beavatkozás, nem hivatalos szerviz által végzett szakszerűtlen javítás ■ fogyasztó feladatát képező karbantartási munkák elmulasztása ■ normál, természetes elhasználódásra visszavezethető (pl. elem lemaradása) vagy üzemszériő kopásnak tulajdonítható meghibásodás okozta. A jótállás a fogyasztó jogszabályból eredő jogait, így különösen a Polgári Törvénykönyv szerinti kellékszavatossági illetve mértékszavatossági jogait nem érinti. ■ Tájékoztatjuk, hogy a fogyasztóvédelmi törvényben meghatározott fogyasztói jogvita bíróságon kívüli rendezése érdekében Ön a megyei (fővárosi) kereskedelmi és iparkamarák által működtetett bekerítető testület eljárását is kezdeményezheti (a bekerítető testületek elérhetősége: <https://bekertetes.hu/index.php?id=testuletek>).

Hivatalos szervíz / Autoryzowana sieć serwisowa

revision 01/2021

Fast Hungary Kft.
2310, Szigetszentmiklós
Kátor u. 10
Hungary
Tel.: + 36/ 23 330 830
Fax: + 36/ 23 330 8274
fasthungary@fasthungary.hu
www.fasthungary.hu

A kereskedő tölti ki

Megnevezés:.....

Típus:..... Gyártási szám:

A termék azonosításra alkalmas részeinek meghatározása (ha alkalmazható):.....

Vásárlást igazoló bonyolat száma:.....

A vásárlás (üzembe helyezés) időpontja: 20..... hó..... nap.

Kereskedő bélyegzöje: Kereskedő aláírása:

Kereskedő címe:

Javítás esetén alkalmazandó**A kereskedő vagy szerviznél történő közvetlen bejelentés esetén a szerviz tölti ki**

A jótállási igény bejelentésének időpontja:

Javításra átvétel időpontja:.....

Hiba oka:.....

Javítás módja:.....

A termék fogyasztó részére való visszaadásának időpontja:.....

A jótállás – kijavítás időtartamával meghosszabbított – új határideje:.....

Szerviz pecsétje: Kereskedő pecsétje:.....

Kicseréléés esetén alkalmazandó

A jótállási igény kicseréléssel került rendezésre.

A csere időpontja:

Kereskedő bélyegzöje:

Tiszttel Fogyszató!

Köszönjük, hogy termékünket választotta. Cégünk és szervizünk elérhetősége:

FAST Hungary Kft. H-2310 Szigetszentmiklós, Kátor út 10. Tel.: 06-23-330-905; 06-23-330-830;Fax: 06-23-330-827, E-mail: szerviz@fasthungary.hu

Garantijos taisyklos

Šiam gaminiui suteikiama 24 mėnesių nuo įsigijimo datos garantija. Garantija apsiriboją žemiau pateikiamomis sąlygomis. Garantija skirta tik gaminiams, skirtims būtiniam naudojimui. Dėl garantinio remonto pirkejai gali kreiptis į pardavėjo parduotuvę, kurioje gaminys pirkto, arba į nurodytus įgalios techninės priežiūros centrus. Galutinis naudotojas jeispareigoja pateikti pretenziją nedelsiant po dedikuotuose atsiradimo, tačiau tik iki garantijos galiojimo periodo pabaigos. Galutinis naudotojas jeispareigoja bendrabarbiauti patvirtinant gaminio defektus, dėl kurių pateikia pretenziją. Priimtas bus tik pilnai sukomplektuotas ir Svarū (pagal higienos standartus) gaminys. Jei pretenzija dėl garantinio remonto bus pagrįsta, gaminio garantijos galiojimo periodas bus prailgintas atitinkamai per periodą nuo pretenzijos pateikimo datos iki galutinės naudotojos pasiūlyta gaminij arba iki datos, kada galutinis naudotojas turėtų pasiūti pasiūlytą gaminį. Nörédamas gauti garantinio remonto paslaugas, galutinis naudotojas turi patvirtintą pretenziją pilnai užpildytais sekaničiais dokumentais: pirkimo kvitu, garantiniu talonu, instalavimo sertifikatu...

Garantija netaikoma: ■ Nukainotoms (brokuotoms) prekėms. ■ Iprastinai susidevinčioms gaminio dalims ■ Gedimams, atsiradusiems neprofesionaliai ar neteisingai gaminį instalavus, nesilaikant gaminio naudojimų instrukciją, naudojant gaminį ne pagal įstatymu numatytus standartus ar įprastinius tokio tipo gaminij naudojimo procesus, naudojant gaminį kitai paskirčiai nei numatyta. ■ Gedimams, atsiradusiems dėl netinkamos ar nepakankamos gaminio priežiūros. ■ Gedimams, atsiradusiems dėl purvo, nenugalimos jėgos aplinkybių (stichinių nelaimių, gaisro, potvynio...). ■ Gedimams, atsiradusiems dėl prastos kokybės signalo, elektromagnetinio lauko trikdžių ir kt. ■ Radus mechaninių pažeidimų (pvz. sulaužyti mygtukai, kritimo pozymiai...). ■ Gedimams, atsiradusiems naudojant gaminį su netinkamomis laikmenomis, jungiant prie netinkamų tinklų, dedant į gaminį netinkamus maitinimo šaltinius (baterijas) ar dėl bet kokų kitų netinkamų naudojimo sąlygu (pvz. aukštos temperatūros, didelės drėgmės, žemės drebėjimų...). ■ Nustatius, kad gaminys taisytas, modifikuotas ar dar yra neįgaliotas tai daryti asmenų. ■ Jei galutinis naudotojas neturi visų reikalų dokumentų, irodančių jo teisę į garantinį remontą (pvz. dokumento, kur būtų nurodatus gaminio įsigijimo laikas ir vieta). ■ Jei data pateiktose dokumentuose skiriasi nuo datos ant gaminio.

Warunki gwarancji

Produkt objęty jest 24 – miesięczną gwarancją, począwszy od daty zakupu przez klienta. Gwarancja jest ograniczona tylko do przedstawionych dalej warunków. Gwarancja obejmuje tylko produkty zakupione w Polsce i jest ważna tylko na terytorium Rzeczypospolitej Polskiej. Gwarancja obejmuje tylko produkty funkcjonujące w warunkach gospodarstwa domowego (nie dotyczy produktów oznaczonych jako „Professional“). Zgłoszenia gwarancyjnego można dokonać w autoryzowanej sieci serwisowej lub w sklepie, gdzie produkt został nabity. Użytkownik jest zobowiązany zgłosić usterkę niezwłocznie po jej wykryciu, a najpóźniej w ostatnim dniu obowiązywania okresu gwarancyjnego. Użytkownik jest zobowiązany do przedstawienia i udokumentowania usterki. Tylko kompletne i czyste produkty (zgodnie ze standardami higienicznymi) będą przyjmowane do naprawy. Usterki będą usuwane przez autoryzowany punkt serwisowy w możliwie krótkim terminie, nieprzekraczającym 14 dni roboczych. Okres gwarancji przedłuża się o czas pobytu sprzętu w serwisie. Klient może ubiegać się o wynajęcie sprzętu na wolny od wad, jeżeli punkt serwisowy stwierdzi na piśmie, że usunięcie wady jest niemożliwe. Aby produkt mógł być przyjęty przez serwis, użytkownik jest zobowiązany dostarczyć oryginalny dowód zakupu (paragon lub faktura), podbitej i wypełnionej karty gwarancyjnej, certyfikatu instalacji (niektóre produkty).

Gwarancja zostaje unieważniona, jeśli:

■ usterka była widoczna w chwili zakupu, ■ usterka wynika ze zwykłego użytkowania i zużycia, ■ produkt został uszkodzony z powodu złej instalacji, niezastosowania się do instrukcji obsługi lub użytkowania niezgodnego z przeznaczeniem, ■ produkt został uszkodzony z powodu złej konserwacji lub jej braku, ■ produkt został uszkodzony z powodu zanieczyszczenia, wypadku lub okoliczności o charakterze siły wyższych (powódź, pożar, wojny, zamieszki itp.), ■ produkt wykazuje złe działanie z powodu słabego sygnału, zakłóceń elektromagnetycznych itp., ■ produkt został uszkodzony mechanicznie (np. wyłamany przycisk, upadek, itp.), ■ produkt został uszkodzony z powodu użycia niewłaściwych materiałów eksploatacyjnych, nośników, akcesoriów, baterii, akumulatorów itp. lub z powodu użytkowania w złych warunkach (temperatura, wilgotność, wstrząsy itp.), ■ produkt był naprawiany lub modyfikowany przez nieautoryzowany personel, ■ użytkownik nie jest w stanie udowodnić zakupu (nieczytelny paragon lub faktura), ■ dane na przedstawionych dokumentach są inne niż na urządzeniu, ■ produkt nie może być zidentyfikowany ze względu na uszkodzenie numeru seryjnego lub plomby gwarancyjnej.

Uab „Senuku Prekybos Centras“ Garantinis Servisas
Jonavos G. 62, Lt-44192,
Kaunas, Lithuania
Tel.: +370 37 212 146
Tex.: +370 37 212 165
garrem@senukai.lt
www.senukai.lt

Fast Poland, Sp. z o.o.
Sokołowska 10
PL 05-090 Puchały
Poland
Tel.: +48 500 116 777
Fax: +48 22 869 96 13
fastpoland@fastpoland.pl
www.fastpoland.pl

