

Rohnson[®]
Instructions Manual
Kettle “Safe Touch” R-7524



When using your kettle basic safety precautions should always be followed, including the followings:

- Before commissioning this kettle, please read the instruction manual carefully.
- Please keep the instruction manual, guarantee certificate, the sales receipt, and if possible, the carton with the inner packaging.
- This kettle is intended exclusively for private and not for commercial use
- Switch off the kettle and remove the plug from the socket when the kettle is not in use. When you disconnect the power cord of the kettle, grasp and pull the plug, not the cord/cable.
- Switch off the kettle before cleaning the kettle.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Test the kettle and the cord/cable regularly for damage. Check that the kettle is operating properly. If there is the damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.
- Do not attempt to repair the kettle yourself, only authorized and qualified personnel may repair this kettle.
- Keep the kettle and cord/cable away from heat, direct sunlight, water, moisture, sharp edges, and the like.
- Use only original accessories, do not connect incompatible products.
- Do not use the kettle outdoors.
- The base and exterior of the kettle are not water-resistant, keep it dry at all times.
- Under no circumstances must the kettle be placed in water or any liquid or come in contact with liquid. Do not handle the kettle with wet or moist hands. Remove the main plug from the socket immediately if the kettle becomes wet or moist.
- DO NOT touch the contents of the kettle.
- Use the kettle only for its intended purpose.
- The kettle is only to be used with the stand provided.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

After using the appliance, put plug off the power socket.

SPECIAL SAFETY INSTRUCTIONS FOR THE KETTLE

- Use only cold water when filling the device.
- The water level must be between the MAX. and MIN. marks.
- Switch the kettle off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Kettle body used must match the kettle base.

FIRST USE OF THE KETTLE

- Before using the kettle for the first time, fill the kettle with cold water and boiled it twice without any additives.
1. Fill the kettle with water. Do not overfill. Use the water level indicator.
 2. Place the kettle on the base.
 3. Electrical connection
 - Check whether the electrical voltage which you intend to use is the same as that of the kettle. Details can be found on the label on the base of the kettle.
 - Only connect the kettle to a properly installed 220-240V~ 50-60Hz socket.
 4. Switch the kettle on. The control lamp shows that the water is being boiled.
 5. After boiling, the kettle switches off automatically.
Disconnect the kettle from the mains electricity supply.
Do not open the lid when pouring.
 6. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments.
 - farmhouses.
 - by clients in hotels, motels, and other residential-type environments.
 - bed and breakfast type environments.
 7. Avoid water spillage on the connector during use.
 8. Warning: If the kettle is overfilled boiling water may be ejected.
 9. Warning: Potential injury from misuse. The heating element surface is subject to residual heat after use.

CLEANING & CARE

EXTERIOR CLEANING

Let the kettle cool down before cleaning. Before you clean your kettle, unplug it and make sure all water is poured out from the kettle. Do not immerse the appliance or its base in water or any other liquid or hold it under a running tap to clean.

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.

From time to time, depending on the nature of your water supply a boiled scale deposit is naturally

formed and can be found mostly adhered to the heating element.

The amount of boiled scale deposited (and subsequently the need to clean or rescale) largely depends on the water hardness in your area and the frequency with which the kettle is used.

Boiled scale is not harmful to your health, but if poured into the beverage, can give a powdery taste to the drink. Therefore, the kettle should be descaled periodically as indicated below.

INTERIOR CLEANING

Descaling

Descalate kettle regularly. With normal use at least twice a year

1. Fill the kettle up to "max" with a mixture of one-part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.
2. Let the mixture remain inside the kettle overnight.
3. Discard the mixture the next morning.
4. Fill the kettle with clean water up to "max" mark and boil again.
5. Discard the boiled water to remove any remaining scale and vinegar.
6. Rinse the inside of the kettle with clean water.

TECHNICAL SPECIFICATIONS

Rated voltage range	220-240 V
Rated frequency	50-60 Hz
Rated power	1850-2200 W
Capacity	1,7L

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

