

Rohinson®

Instruction Manual

Capsule Espresso Machine

Model: R-98042




Read this manual thoroughly before using and save it for future reference.

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to people, do not immerse cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children and dependent people.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury to people.
8. The machine should be placed on the table or flat place for use. Do not let cord hang over edge of table or counter.
9. Do not use it at high temperature, make sure that the power cord does not touch the hot parts of the appliance.
10. Do not let the machine work in a sub-zero environment to avoid freezing and damaging the pipeline, which cannot work properly.
11. Only fill the tank with clean and cold water. Never fill the tank with mineral water, milk or other liquids.
12. Do not let the coffee maker operate without water.
13. Never insert finger into the capsule holder to avoid nipping finger.
14. There is extremely hot water in the capsule holder during the brew process. To avoid risk of injury, do not lift the brew handle during brewing process.
15. Please insert the plug into the power socket before use. To disconnect, press the button to the off position and then remove plug from the socket. Always hold the plug. But never pull the cord.
16. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
17. Appliances can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and they understand the hazards involved.
18. Do not use it outdoors.
19. Children should not play with the appliance.
20. This appliance is intended to be used in households and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
21. Save these instructions for future references.

PRODUCT DESCRIPTION

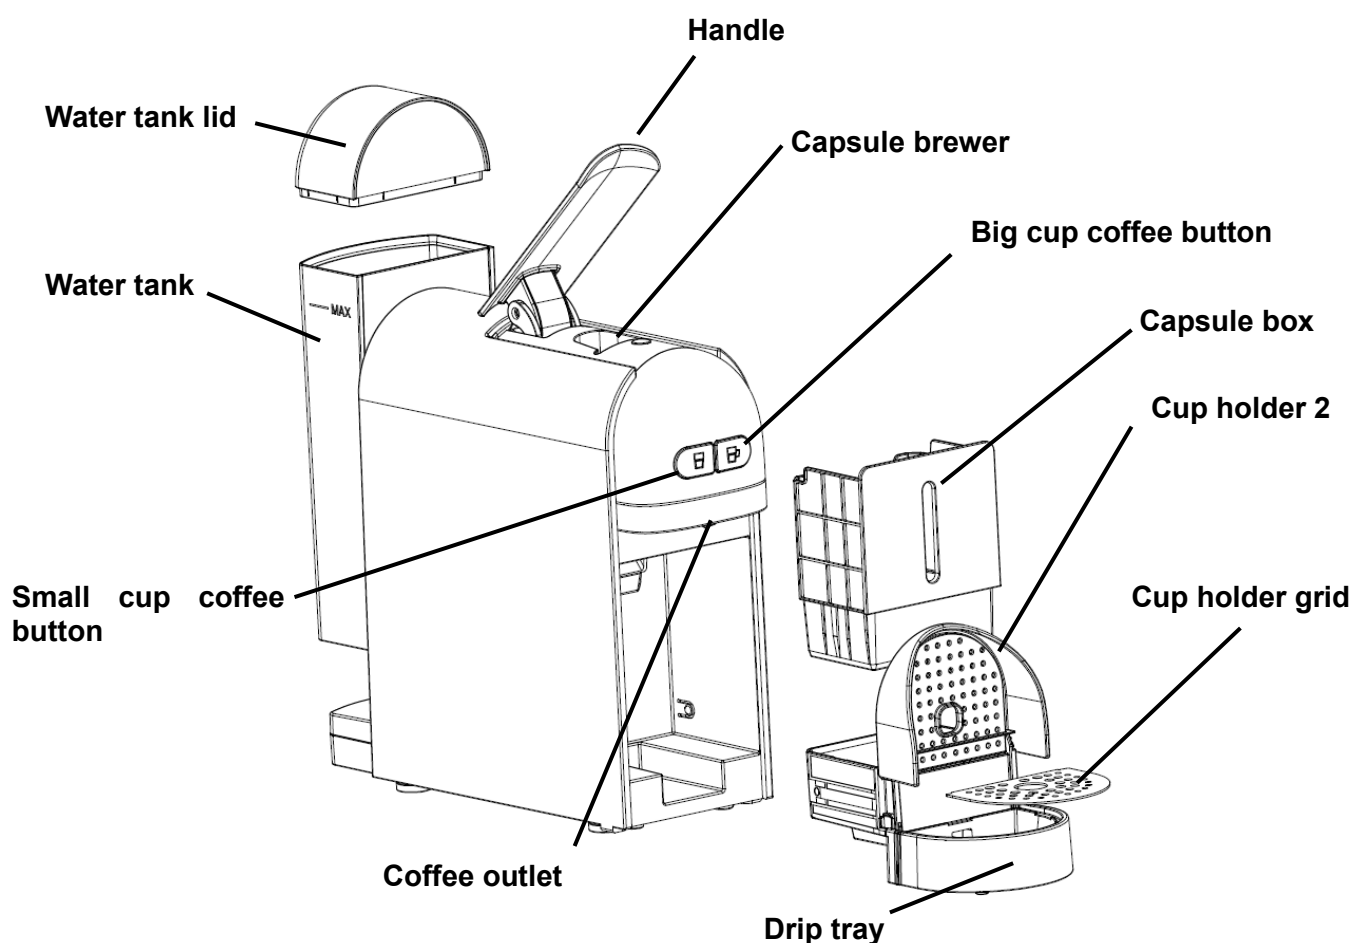

FOR THE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank, make sure the handle is closed in place. Place a container on the cup holder grid, insert the plug, press the big cup or small cup buttons for preheating, the indicator light starts to flash until it turns steady, indicating that the preheating of the machine is completed. Then press the big cup or small cup coffee button. After a while, the water starts to flow out of the coffee outlet. Once the desired quantity has been reached, the water will stop flowing out. Then discard the water. Clean all detachable parts thoroughly with warm water.

Note: While pressing down the big cup or small cup coffee button, the machine may produce a pumping sound, this is normal. The sound tells you that the machine is pumping water for brewing coffee.

USING YOUR COFFEE MAKER

1. Fill the water tank with drinking water. The water level shall be no less than MIN but no more than MAX level.
2. Open the handle by lifting it and insert a coffee capsule. Close the handle by pushing it down directly.

CAUTION: Only use Nespresso type capsules for the appliance.

3. Plug the power cord into the outlet, press big cup or small cup button, indicator light starts to flash and the appliance starts preheating.

CAUTION: During brewing, never open the handle. Otherwise, the coffee capsule will be expelled into the capsule collection tray.

4. Place a container on the cup holder grid. Make sure the drip tray is assembled in place.
5. Once the indicator of big cup or small cup coffee buttons light steadily, it means that the appliance has finished preheating. Then you can start brewing coffee with the default settings. The default coffee volume for small and big cup is 40ml and 110ml respectively.

(I) But if you want to adjust the coffee volume to small and big cups, you can follow the steps below:

- Press and hold the small or big cup button for 2 seconds and release it, and the corresponding indicator light is always on.
- Currently, the appliance enters custom coffee volume setting, press the big or small cup buttons that stay on steadily again.
- When the required coffee volume is obtained, press the big or small cup buttons again. The machine stops working and saves the selected coffee volume data.
- When you press the big cup or small cup button again, the machine will dispense the adjusted coffee volume.
- The adjustable volume range is 20-60ml for small cup and 60-110ml for big cup. When the adjusted coffee volume is greater than 100ml, it is recommended to let the machine rest for 1 minute and 30 seconds after brewing each cup of coffee.

(II) After adjusting the coffee volume, if you need to restore the factory settings, you can follow the steps below:

- Unplug the power plug.
- Press the big and small cup buttons at the same time, plug in the power supply, and release the buttons when the big and small cup buttons light up.
- Unplug the power plug again.
- Wait for about 5 seconds and then plug in the power, the machine will restore the default settings.

NOTE:

i) Coffee volume adjustment and coffee brewing can only be carried out after preheating.

ii) The appliance will enter the standby mode if there is no operation within 5 minutes after the indicator of big cup or small cup coffee buttons light steadily.

iii) During brewing, you can interrupt the coffee brewing process by pressing your selected coffee button once. To continue it, you just need to press the button again.

iv) Press the big cup or small cup button according to your own needs, and then the corresponding indicator light starts to flash. After a while, the coffee will flow from the coffee outlet. Once the required coffee volume is obtained, the machine will automatically stop operating, and the corresponding indicator light will stay on.

v) Once you have finished brewing coffee, always expel the capsule. Capsules are automatically expelled into the capsule collection tray by opening the handle.

CAUTION: (a) Never open the handle during brewing cycles, in case of being burnt.

(b) Never open the handle immediately after brewing. Wait 5 seconds before opening the handle.

vi) If you want to brew coffee again, firstly, make sure that the plug is connected well with the power source and press any button of big or small cup. Afterwards, the machine will begin to preheat. Press any button after preheating, the machine will continue to brew coffee.

vii) If you want more cups, insert a new capsule into the capsule brewer.

viii) Empty the capsule collection tray and rinse the unit and tank frequently.

ix) Always turn the coffee maker off and disconnect the power supply when not use.

x) After 15 minutes of continuous operation, it is recommended that the machine rest for 5 minutes.

CLEANING AND MAINTENANCE

Be sure to unplug this appliance and cool down before cleaning. To protect against electrical shock, fire and personal injury, do not immerse cord, plug or unit into water or other liquid. After each use, always make sure plug is first removed from wall outlet. We recommend that the following is performed on a periodical basis:

1. Use a dry cloth to wash the removable water tank.
2. Empty the capsule collection tray and clean it.
3. Clean the capsule holder with dry cloth.
4. Use a damp cloth to gently wipe the cup holder grid. Empty the capsule collection tray and rinse it.
5. Clean the machine using a damp cloth, never submerge the machine.
6. Replace all parts and keep them for next use.

Note: Before cleaning, first boil clean water, clean the pipeline in the machine, and then cut off the power for cooling.

REMOVING MINERAL DEPOSITS

To ensure the cleanness of the internal water flow channel, the coffee machine needs to be descaled, cleaned and maintained after use. When the coffee machine's big and small cup indicator flashes 3 times quickly for 1 second and then goes out, it means that you need to descale the machine at this time (this alarm will disappear only after descaling).

1. In the power-on state, press and hold the big and small cup buttons at the same time for 2 seconds, and the big and small cup indicator lights flash rapidly at the same time to indicate that the descaling function has been started.
2. Fill the water tank with an appropriate amount of water and descaling agent (the ratio of water to descaling agent is 4:1, the specific ratio is subject to the instruction manual of the descaling agent).
3. Make sure that the handle is closed in place.
4. Place a container on the cup holder grid.
5. Press the big or small cup button, the coffee machine will start descaling until the coffee machine stops working and the descaling is completed.
6. Press and hold the big and small cup buttons at the same time for 2 seconds to exit the descaling state and enter the normal standby state.

TROUBLESHOOTING

Problem	Solution
No indication.	Check that the plug has been inserted correctly into the socket, and that the big or small cup button has been pressed.
The machine makes a strange noise.	Check that there is water in the tank.
The lights are on, but no coffee comes out.	The capsule inserted may be faulty. Wait for a few seconds, then try again with a new capsule.
There are signs of water at the bottom of machine.	Make sure that the tank has been fitted correctly into position.
The capsule can't be put into brewing cavity.	Check if the capsule collection tray is full, need to clean. Maybe the handle didn't open in position, need to open again.
The capsule can't fall normally.	Check if the capsule collection tray is full, need to clean. Maybe the handle didn't open in position, need to open again.
A slight hiss can be heard after the coffee has been released.	This is not a fault, but normal settling of the pressure control valve.
Big and small cup indicator flashes 3 times quickly for 1 second and then goes out.	This is an alarm of descaling the machine.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.