

GilletteLabs Heated Razor



91652378VII-18

Type 2516

MANUAL

GILLETTELABS CUSTOMER CARE

Thank you for purchasing a GilletteLabs product. We hope you are completely satisfied with your new GilletteLabs product.

Questions?

(UK)(IE) 00 800 445 53 883

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.



When disconnected, the hand-held part of this appliance may be used in a bath or shower.


DANGER


To reduce the risk of electric shock:

1. The charging dock is not for immersion in water or for use in shower.
2. Do not reach for a charger that has fallen into water. Unplug immediately.
3. Do not place, store or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. This appliance is provided with a Smart Plug with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
6. Do not use an extension cord with this appliance.
7. Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep out of reach of children. Small parts may come off in case of rough handling or drop.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service centre for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening of the appliance.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this appliance with a damaged or broken shaving system, as serious skin injuries may occur.
9. Always attach plug to appliance first, then to outlet. To disconnect turn all controls to off, then remove plug from outlet.
10. When plugging to an electrical outlet that does not match the provided power plug, use a plug adapter to match the outlet's pin configuration.
11. To recharge the battery, only use the detachable power supply provided with this appliance. If the appliance is marked -C 492-XXXX, only use Braun power supplies coded 492-XXXX.
12. The razor handle and the charger contain NdFeB magnets and generate magnetic fields. If you use a medical device or have an implanted medical device, consult with the medical device manufacturer or a physician, if you have questions about safely using your GilletteLabs Heated Razor.

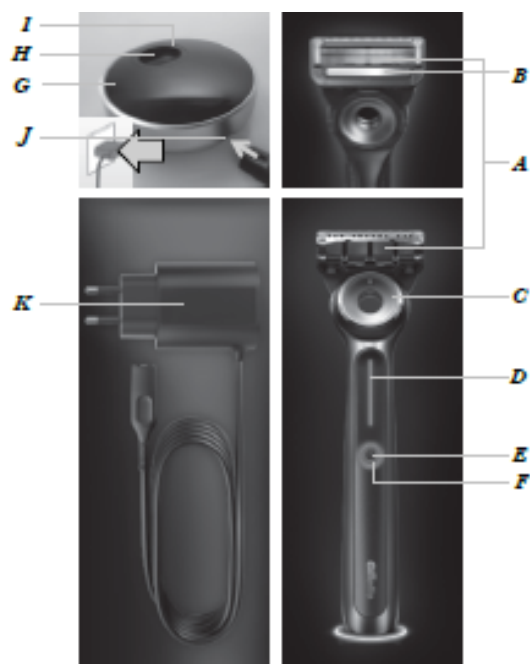

DESCRIPTION

- | | |
|----------------------------------|---------------------------|
| A. CARTRIDGE | G. CHARGING DOCK |
| B. WARMING BAR | H. CHARGING TROUGH |
| C. CARTRIDGE EJECT BUTTON | I. DOCK INDICATOR |
| D. HEATING INDICATOR | J. POWER SOCKET |
| E. ON/OFF BUTTON | K. SMART PLUG |
| F. CHARGING INDICATOR | |

For electrical specifications, see printing on the Smart Plug.

SAVE THESE INSTRUCTIONS

This razor has a warming bar, which gives you a warming sensation as you shave.

The warming sensation experienced may differ from person to person. It is influenced by personal and environmental factors (e.g. skin, environmental temperature, temperature of rinsing water).

This product is for household use only.

FIRST USE & CHARGING

Prior to first use the product needs to be activated by connecting to the charging dock, otherwise it cannot be switched on.

1. Connect the charging dock (G) to the Smart Plug (K) by snapping it into the power socket (J), then plug it into an electrical outlet. The dock indicator (I) will light up once if the connection was successful.
2. Place the handle onto the charging trough (H) of the charging dock (G) in an upright position as shown in the picture. The on/off button (E) needs to face away from the power socket.
3. The charging trough is magnetic and will hold the product in an upright position, if it has been placed properly.
4. When the handle sits properly in the charging trough, charging will start automatically. This is confirmed by consistent white pulsing of charging indicator and dock indicator (F and I).

CHARGING

Prior to first use, activate the product by connecting to the charging dock (see chapter **First Use and Charging**) and charge the product for **at least 1 hour**.

A full charge takes **about 6 hours** and provides about 18 minutes of heat.

When fully charged, or when the handle is taken off the charging dock, all indicators will turn off.

Recommended ambient temperature for charging and usage is 41°F to 95°F (5°C to 35°C). The product may not charge or work properly under extreme low or high temperatures.

Do not expose the product to temperatures higher than 122°F(50°C) for extended periods of time.

LOW CHARGE

When the battery is **running low**, the charging indicator (F) will blink orange or yellow (dependent on temperature setting) if device is on. There is enough battery power left for about one shave with active heating function.

When the battery is **empty** the heating indicator (D) and the charging indicator (F) will blink white 3 times. There is not enough battery left to activate the warming bar and the product will turn off. You may continue shaving without the warming bar activated. After finishing your shave, put the handle back on the charging dock.

Charge the product for at least **1 hour** before using again.

USAGE

Press the on/off button (E) to activate the warming bar.

The charging indicator (F) light remains constant and the heating indicator (D) will blink orange or yellow (dependent on temperature setting) indicating that the product is heating up. The heating indicator light remains constant when the selected heating temperature has been reached (see chapter **Temperature selection**).

Shave as usual. We recommend using with Gillette shaving foam or gel.

Make sure the cartridge is in full contact with the skin.

Deactivate the warming bar after shaving by pressing the on/off button (E).

If you do not switch off the product, it will automatically be switched off, after about 8 minutes or when you put it back on the charging dock.

TEMPERATURE SELECTION

Temperature can only be selected once the product has heated and the heating indicator (D) light remains constant.

There are two temperature settings available.

On first use, the razor will warm to the higher heat level.

To adjust temperature level, press and hold the on/off button (E) until the heating indicator (D) changes colour. An **orange** light indicates the **higher heat level** and a **yellow** light indicates the **lower heat level**.

The razor will warm to the heat level you last used the next time you power on the device.

CLEANING

The handle is waterproof, so you can rinse the handle and the shaving system under warm running water until all residue has been removed. You may use liquid soap without abrasive substances. Rinse off all foam. **The appliance must not be cleaned in a dishwasher!**

RECYCLING

EU Member States



Product contains batteries and recyclable electric waste. For environment protection do not dispose of in household waste, but take the complete appliance, without removing the battery to electric waste collection points provided in your country.

TROUBLESHOOTING

Problem

The charging indicator (F) and the heating indicator (D) alternately blink orange or yellow (dependent on temperature setting) for a few seconds and then turn off. The heater is deactivated...

1. directly after switching on or during usage
2. during rinsing when the product is switched on
3. during charging

Remedy

1. Reduce the temperature of the rinsing water.
2. (See chapter **Questions?**)

Problem

Heater switches off after immersing shaving system in cold water.

Remedy

Take shaving system out of the cold water and switch the product on again. For battery protection, the product should not be immersed in cold water with activated warming bar for a long period of time.

Problem

The indicators on the handle do not light up...

1. when pressing the on/off button
2. when putting the handle on the charging dock

Remedy

1. Ensure that the environmental temperature is within the valid range. Recommended temperature for proper charging and usage is 41°F to 95°F (5°C to 35°C).
2. Product has not been activated via the charging dock before first use (see chapter **First Use and Charging**).

WARRANTY

Your GilletteLabs warranty starts on the day of purchase and runs for 2 years. If your GilletteLabs product is defective during the warranty period, we will replace it free of charge or reimburse your purchase. (See chapter **Questions?**)

The warranty does not cover cosmetic damage such as scratches, or damage caused by:

- Normal wear and tear
- Accident, misuse, dirt or water
- The product being tampered with
- Improper use
- Repairs carried out by agents not authorized by GilletteLabs
- Failure to take proper care of the product, including recharging
- The product being altered or used for commercial purposes

Note: Not for resale. Warranty limited to products purchased directly from approved retailers.



91652378